BELLAVISTA

SFFX 830-910

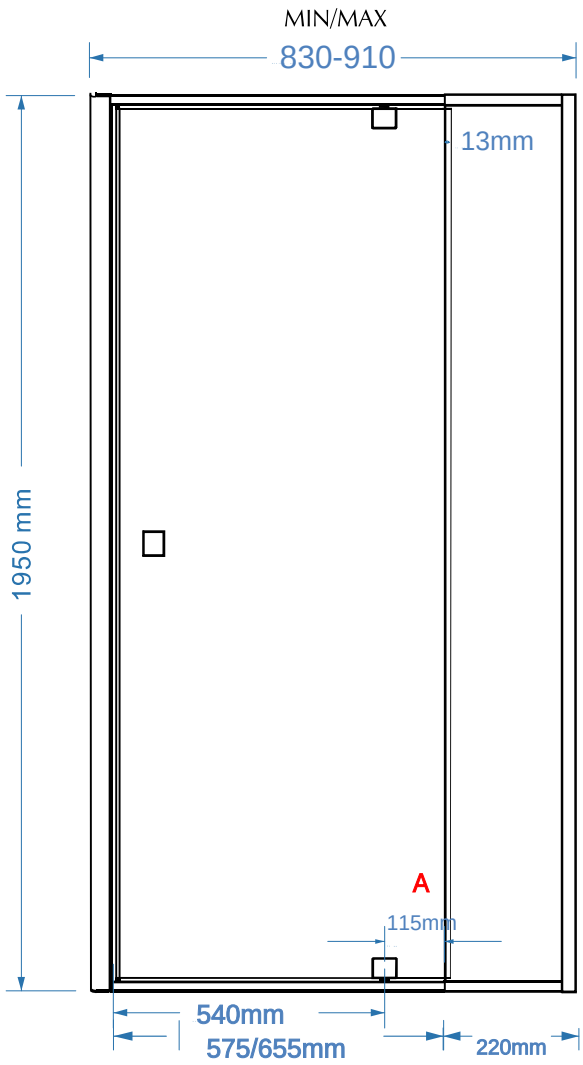

A. 115mm at maximum size adjustment. 35mm at minimum size adjustment.
B. Door opening size.
C. Door open direction - Outwards only.
D. If front only (wall-to-wall) installation required, must remove corner-section.
Please follow "F "adjust 6mm bothside to match size 830mm or 910mm
E. Adjustment/telescopic range from fixed glass to pivot position.
F. 4-10mm adjustment

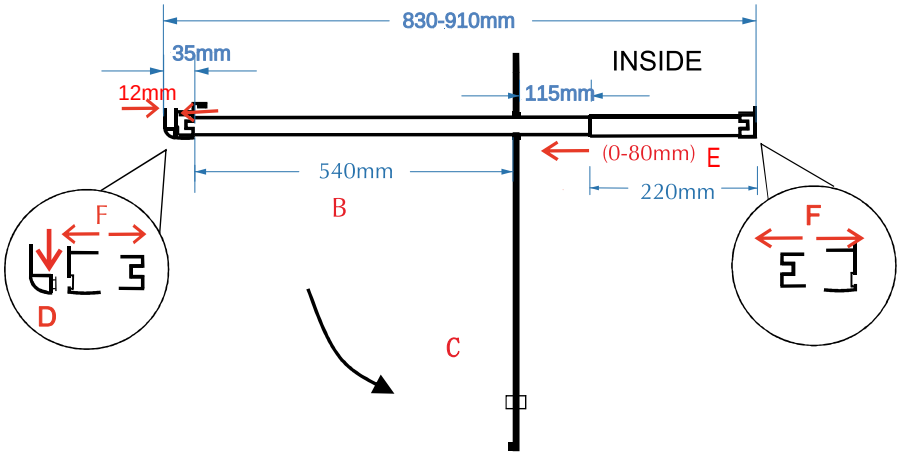

*Universal - Left or Right hand installation

BELLAVISTA

SFFX 900-980

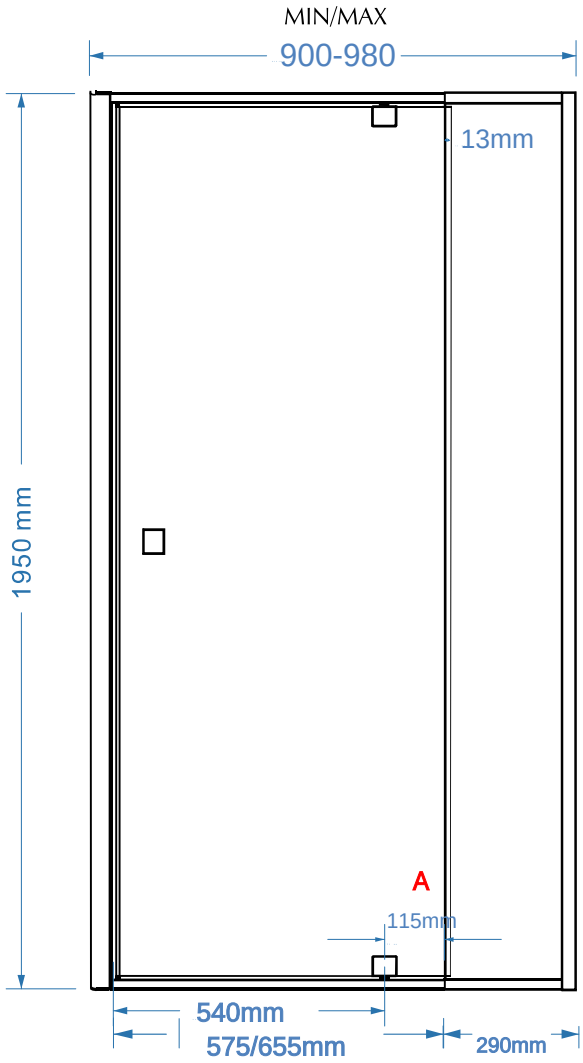

A. 115mm at maximum size adjustment. 35mm at minimum size adjustment.
B. Door opening size.
C. Door open direction - Outwards only.
D. If front only (wall-to-wall) installation required, must remove corner-section.
Please follow "F "adjust 6mm bothside to match size 900mm or 980mm
E. Adjustment/telescopic range from fixed glass to pivot position.
F. 4-10mm adjustment

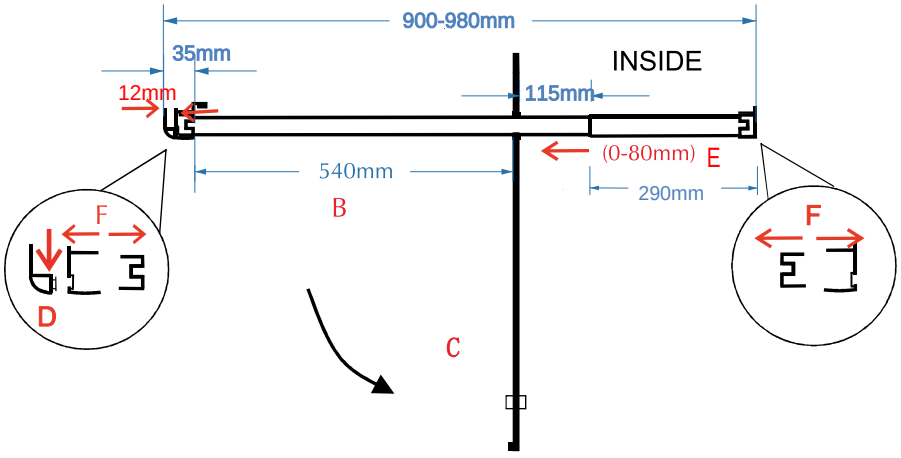

*Universal - Left or Right hand installation

BELLAVISTA

SFFX 970-1050

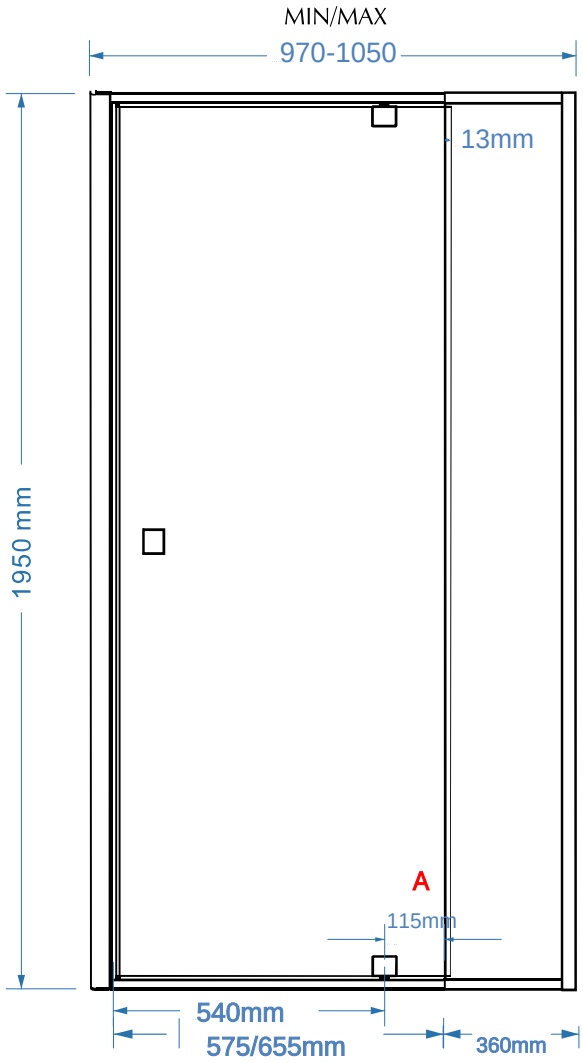

A. 115mm at maximum size adjustment. 35mm at minimum size adjustment.
B. Door opening size.
C. Door open direction - Outwards only.
D. If front only (wall-to-wall) installation required, must remove corner-section.
Please follow "F "adjust 6mm bothside to match size 970mm or 1050mm
E. Adjustment/telescopic range from fixed glass to pivot position.
F. 4-10mm adjustment

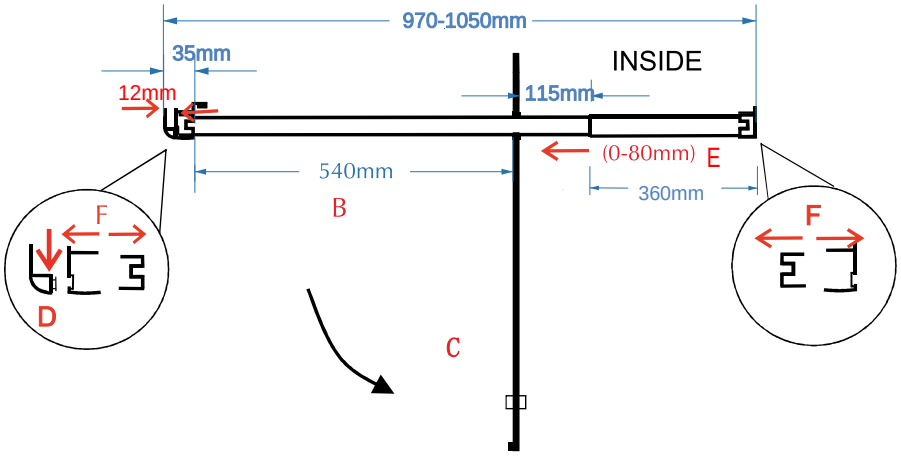

*Universal - Left or Right hand installation

BELLAVISTA

SFFX 1050-1130

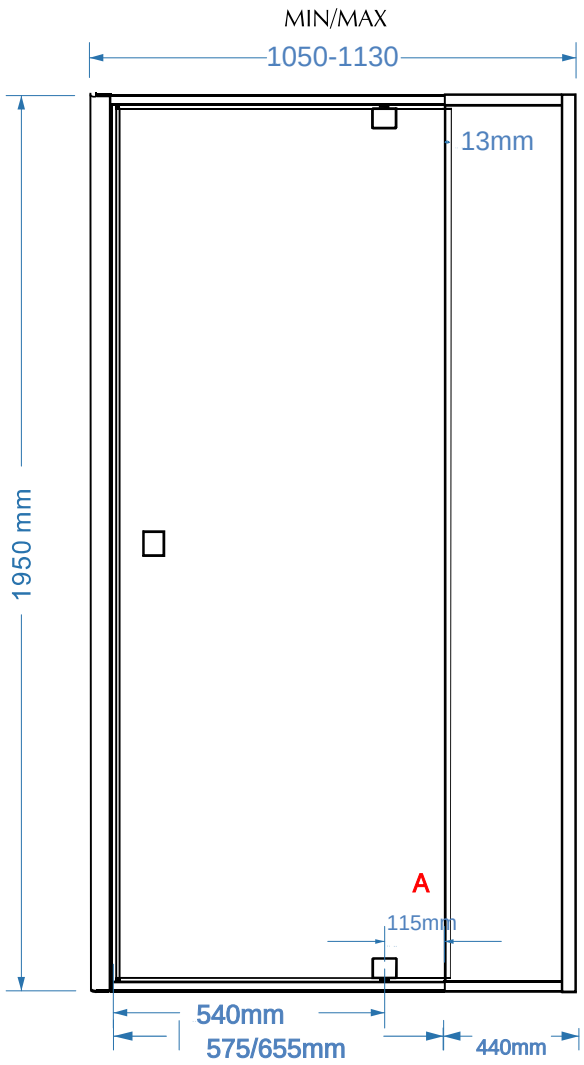

A. 115mm at maximum size adjustment. 35mm at minimum size adjustment.
B. Door opening size.
C. Door open direction - Outwards only.
D. If front only (wall-to-wall) installation required, must remove corner-section.
Please follow "F "adjust 6mm bothside to match size1050mm or 1130mm
E. Adjustment/telescopic range from fixed glass to pivot position.
F. 4-10mm adjustment

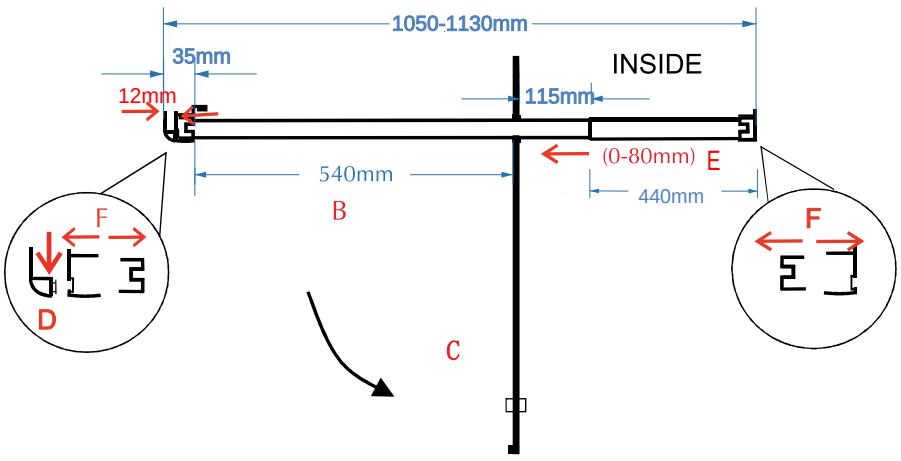

*Universal - Left or Right hand installation

BELLAVISTA

SFFX 1130-1210

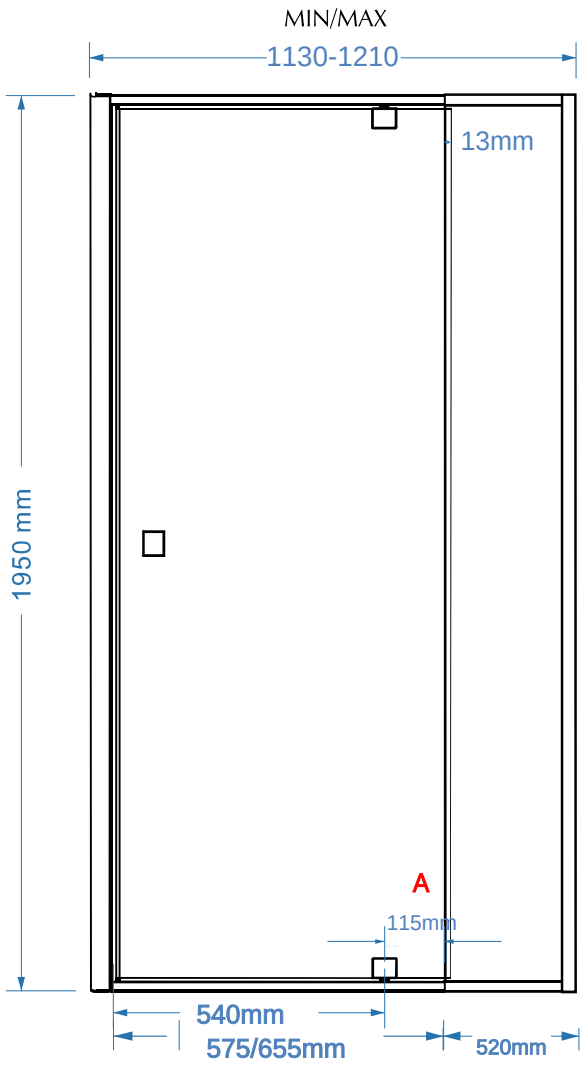

A. 115mm at maximum size adjustment. 35mm at minimum size adjustment.
B. Door opening size.
C. Door open direction - Outwards only.
D. If front only (wall-to-wall) installation required, must remove corner-section.
Please follow "F "adjust 6mm bothside to match size 1130mm or 1210mm
E. Adjustment/telescopic range from fixed glass to pivot position.
F. 4-10mm adjustment

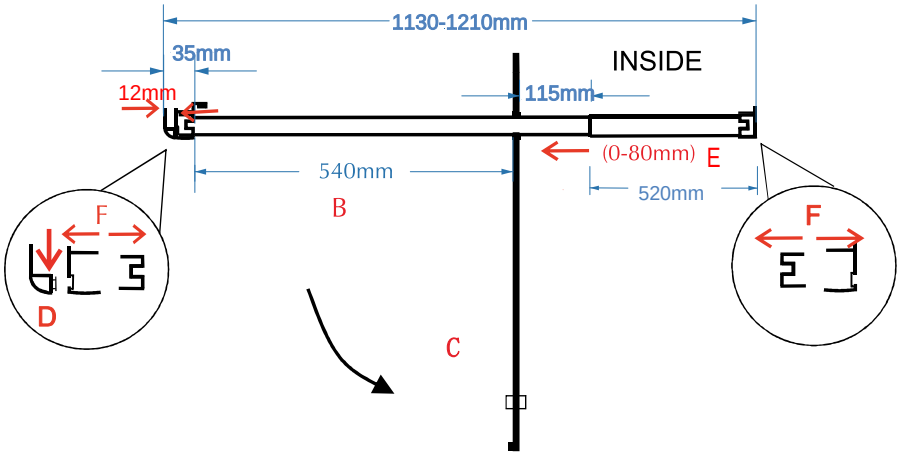

*Universal - Left or Right hand installation

BELLAVISTA

SFFX 1200-1280

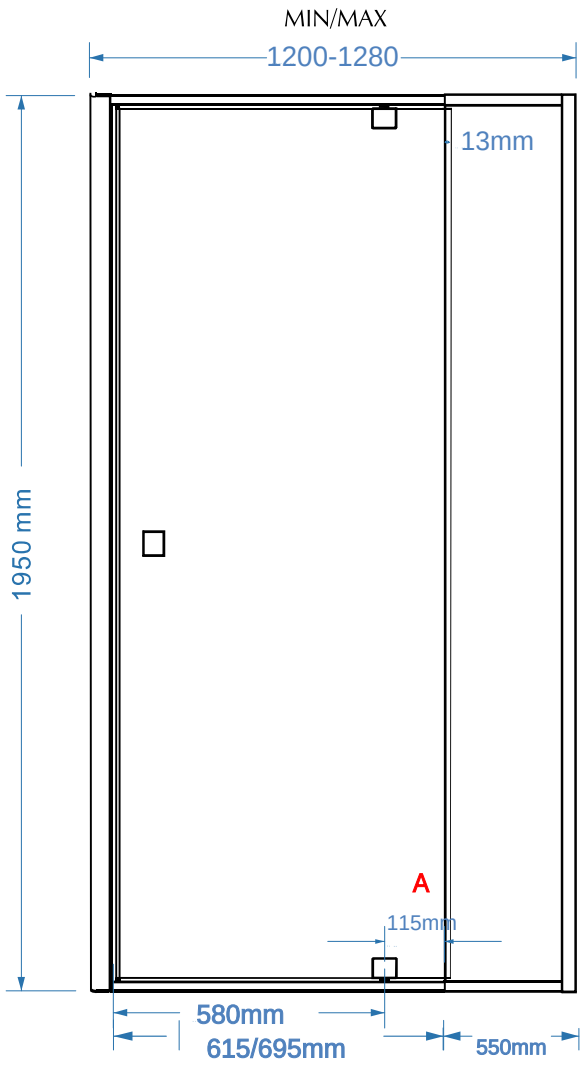

A. 115mm at maximum size adjustment. 35mm at minimum size adjustment.
B. Door opening size.
C. Door open direction - Outwards only.
D. If front only (wall-to-wall) installation required, must remove corner-section.
Please follow "F "adjust 6mm bothside to match size 1200mm or 1280mm
E. Adjustment/telescopic range from fixed glass to pivot position.
F. 4-10mm adjustment

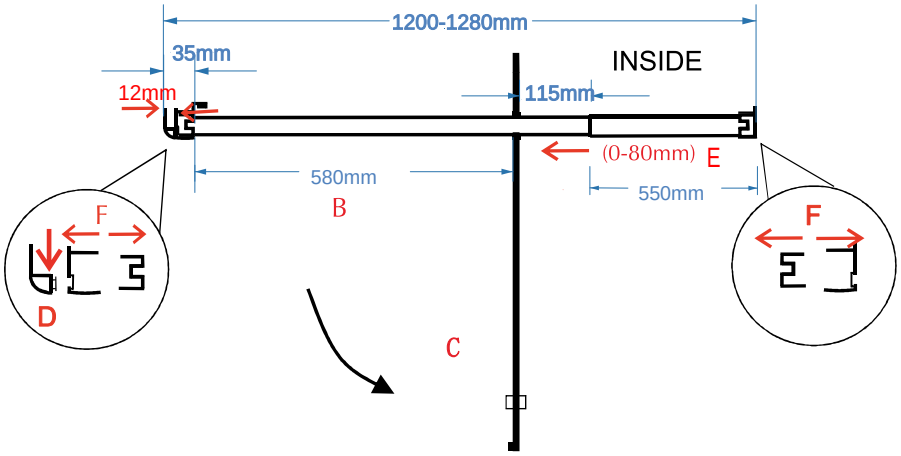

*Universal - Left or Right hand installation

BELLAVISTA

SFFX 1280-1360

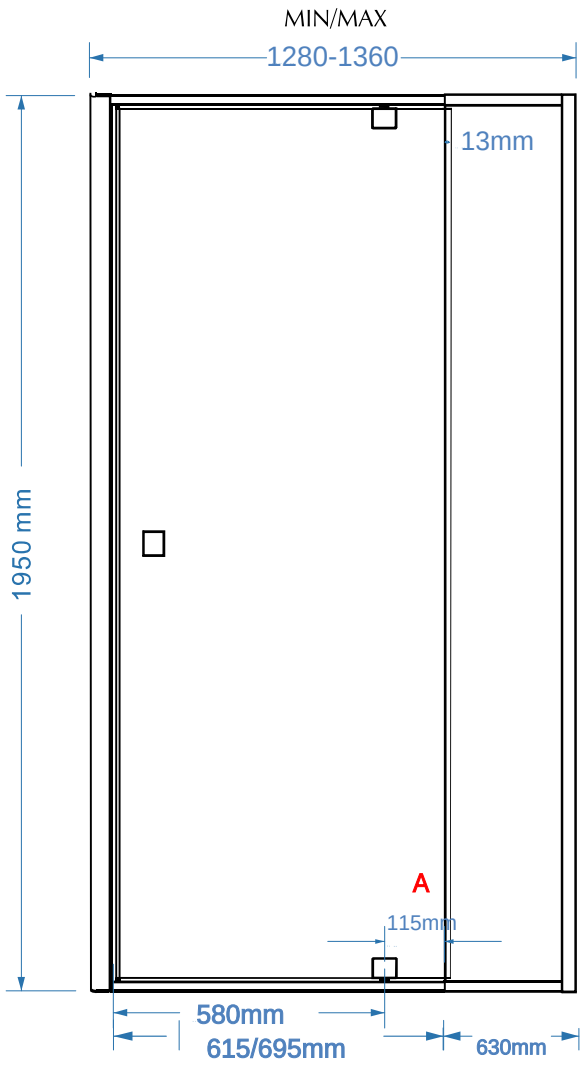

A. 115mm at maximum size adjustment. 35mm at minimum size adjustment.
B. Door opening size.
C. Door open direction - Outwards only.
D. If front only (wall-to-wall) installation required, must remove corner-section.
Please follow "F "adjust 6mm bothside to match size 1280mm or 1360mm
E. Adjustment/telescopic range from fixed glass to pivot position.
F. 4-10mm adjustment

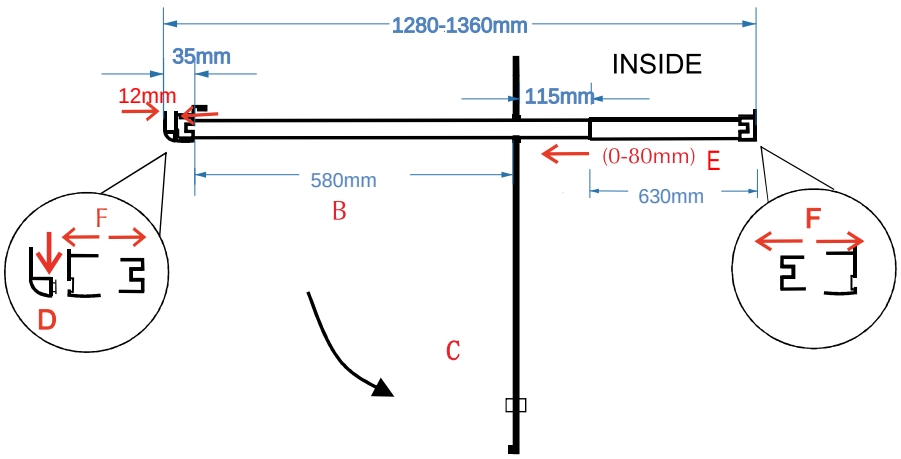

*Universal - Left or Right hand installation

BELLAVISTA

SFFX 1360-1440

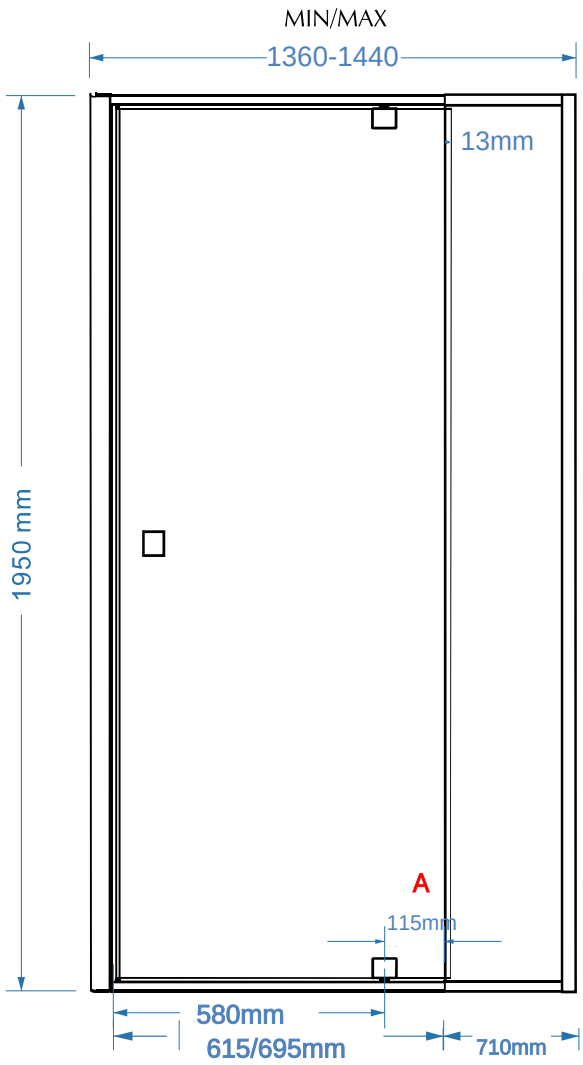

A. 115mm at maximum size adjustment. 35mm at minimum size adjustment.
B. Door opening size.
C. Door open direction - Outwards only.
D. If front only (wall-to-wall) installation required, must remove corner-section.
Please follow "F "adjust 6mm bothside to match size 1360mm or 1440mm
E. Adjustment/telescopic range from fixed glass to pivot position.
F. 4-10mm adjustment

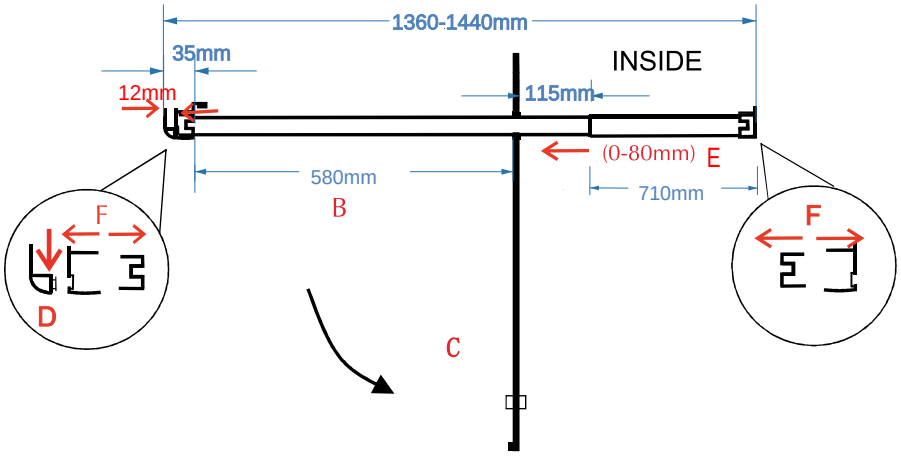

*Universal - Left or Right hand installation

BELLAVISTA

SFFX 1440-1520

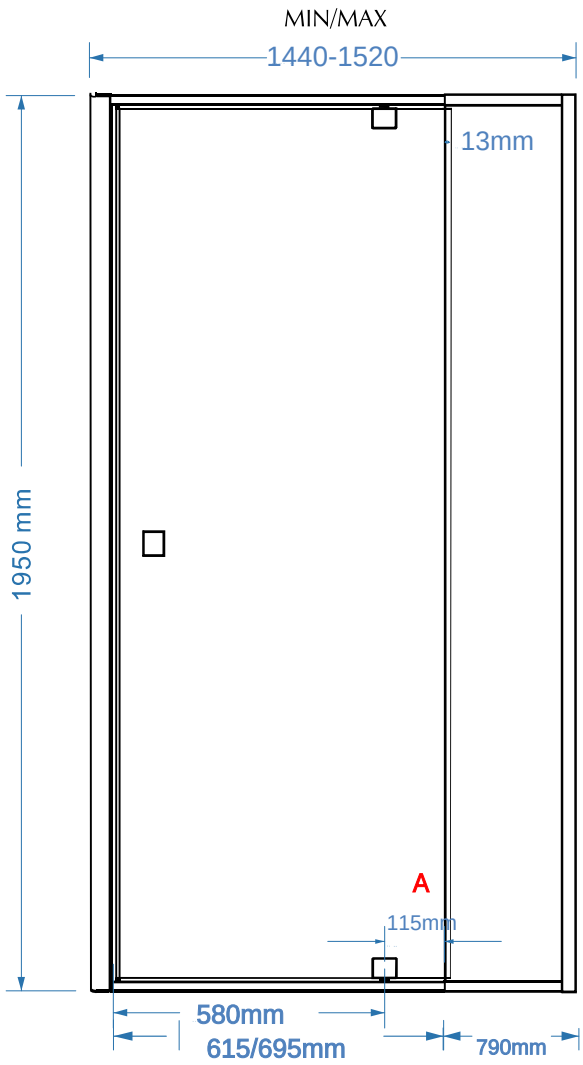

A. 115mm at maximum size adjustment. 35mm at minimum size adjustment.
B. Door opening size.
C. Door open direction - Outwards only.
D. If front only (wall-to-wall) installation required, must remove corner-section.
Please follow "F "adjust 6mm bothside to match size 1440mm or 1520mm
E. Adjustment/telescopic range from fixed glass to pivot position.
F. 4-10mm adjustment

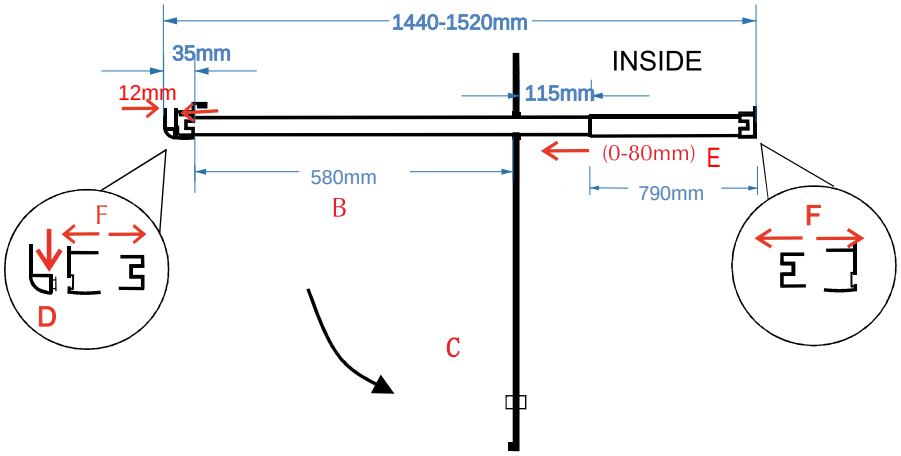

*Universal - Left or Right hand installation