


## Bath Screen Installation Guide

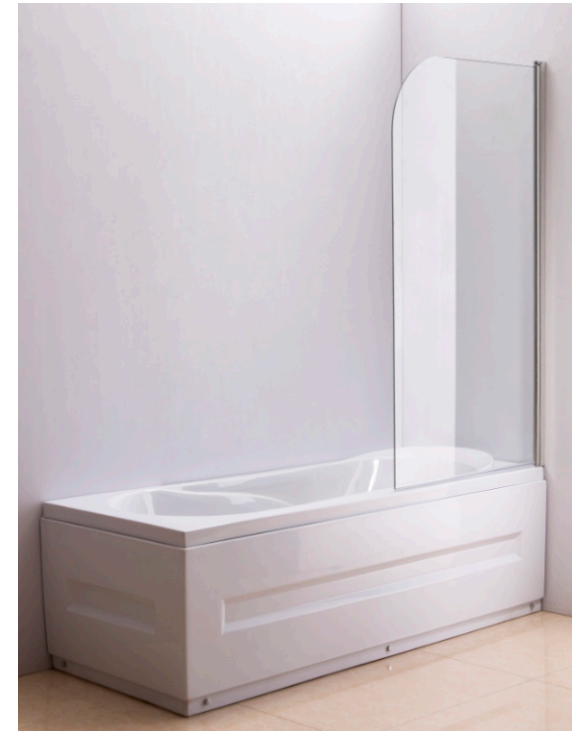

**MODEL: BTH-BD16 75**  
**SIZE: 750X1600MM**

## ◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported after installation will not be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass

### Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.






## Aftercare instructions

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up.


Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.

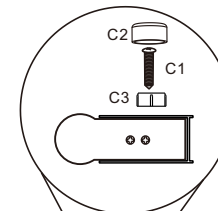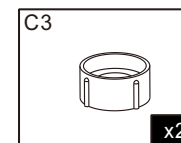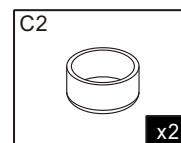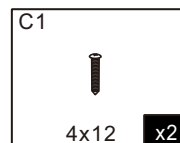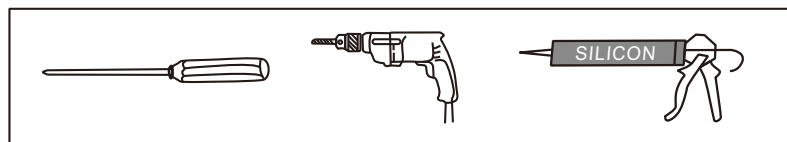

## Tools Required










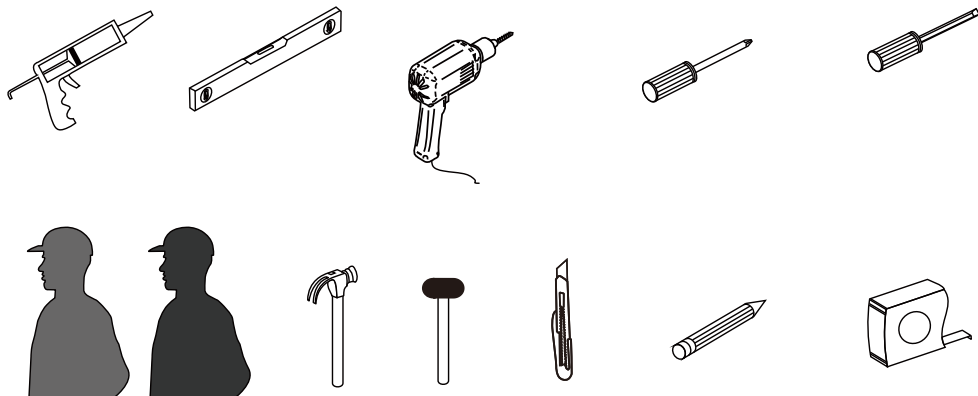


This product is heavy and may require two people to install.



Allow 48 hours for silicone to dry before use.

Allow 72 hours for silicone to dry before use in winter.

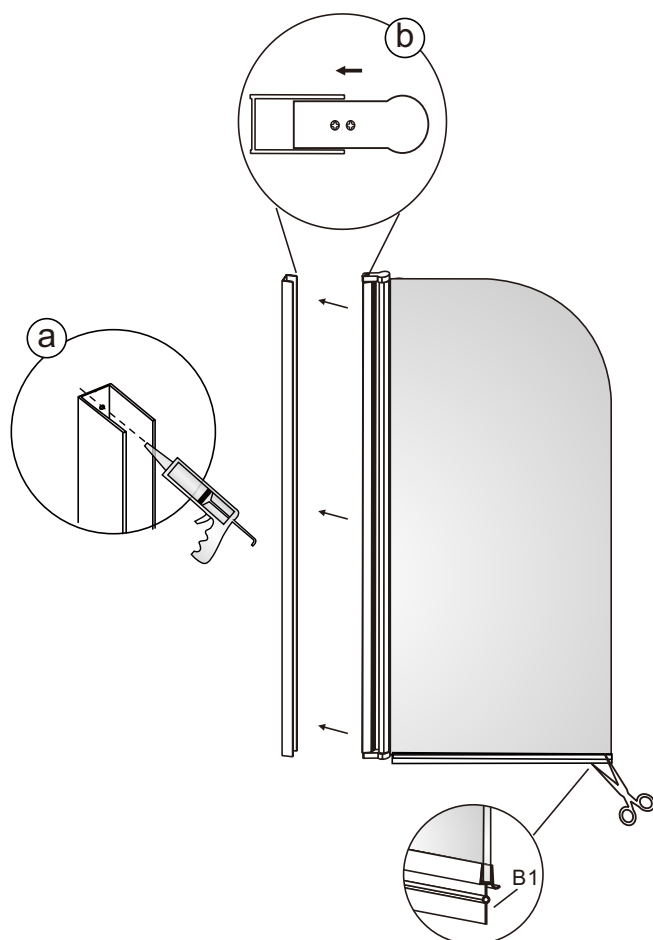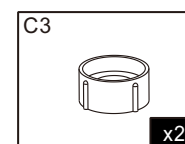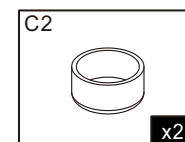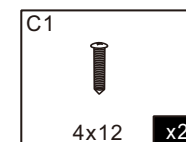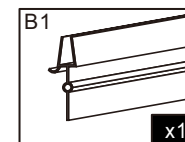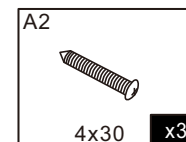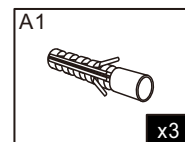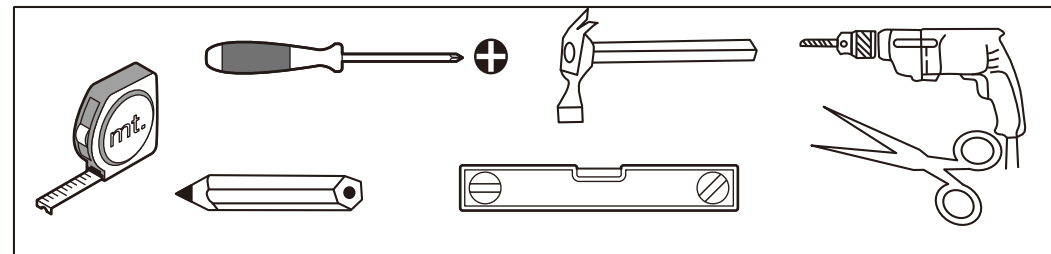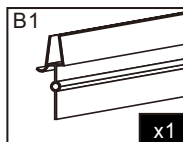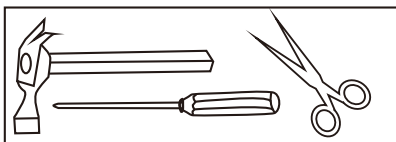

a. Pump Silicon inside the Chanel

b. Put the screen into the Chanel and clean the silicon

A1:Wall plug for wall






A2:Screw to fix channel to wall

B1:Plastic floor seal on the glass bottom

C1:Screw for plastic cap(D3)

C2:Plastic screw cap cover

C3:Plastic screw cap

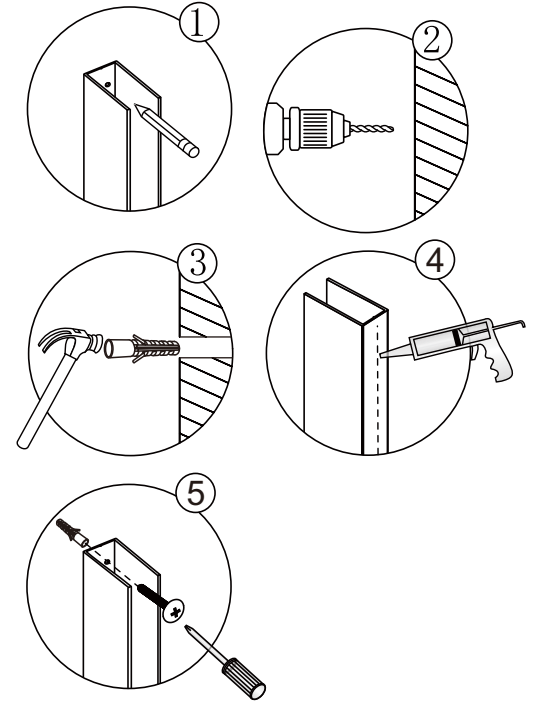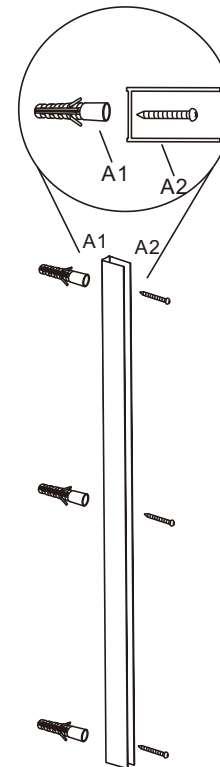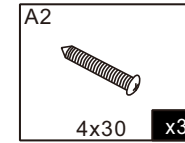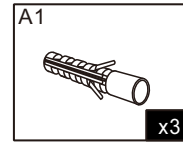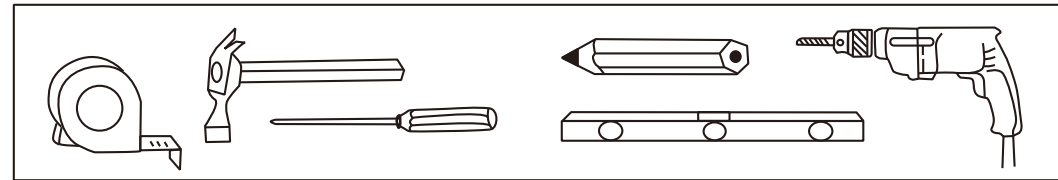

- 1.Place chanel in correct location and mark hole position.
- 2.Check for wires,cables,piper before you drill,if safe go ahead and drill holes
- 3.Use a rubber Mallet to knock inthe plastic plugs know in auseralia as (Spagetis).
- 4.Pump Silicon behind the Chanelto creat a water tight seal.
- 5.Long as they are Stainless or Galvenized so they dont rust over time