

Bath Screen Installation Guide



MODEL: BTH-16FS1
SIZE: 1000X1600MM

◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported after installation will not be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass

Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.

Aftercare instructions


After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up.

Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.








Please keep these instructions for aftercare and customer service details.

Tools Required











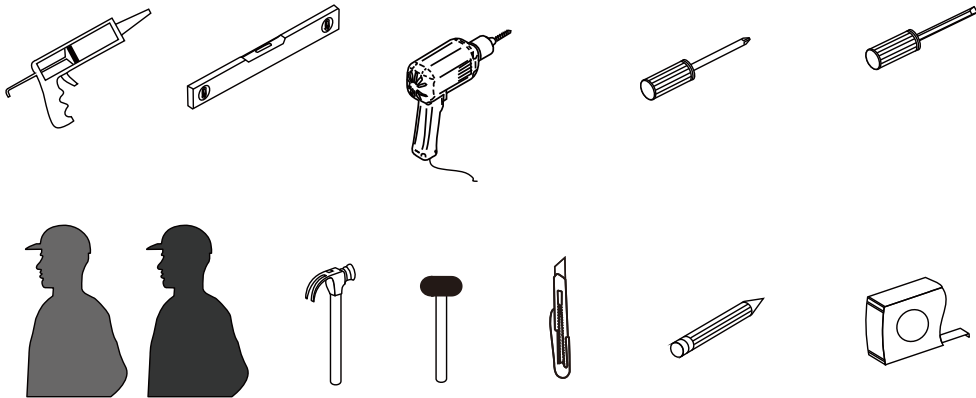


This product is heavy and may require two people to install.



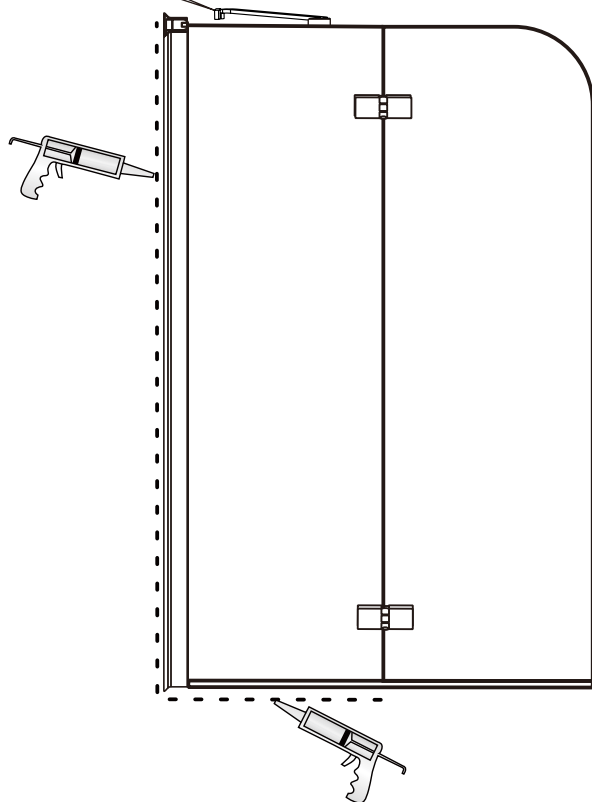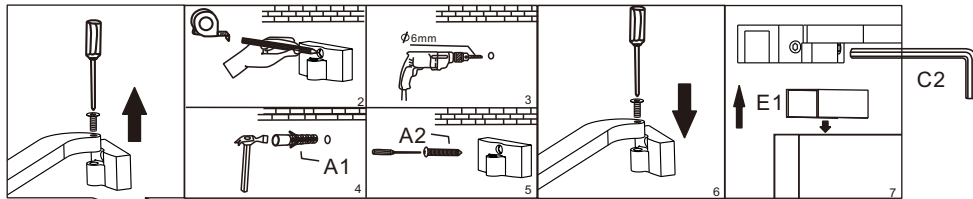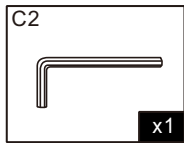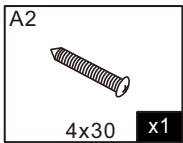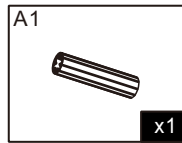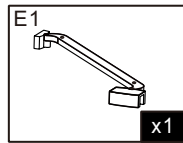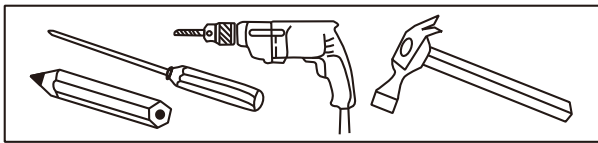

Pump silicon outside of the screen and clean it

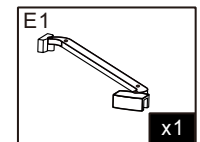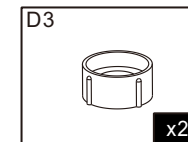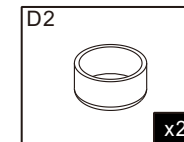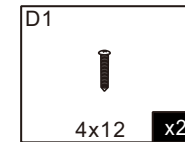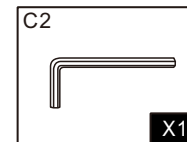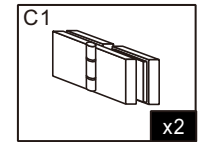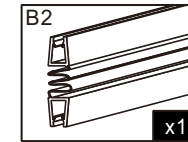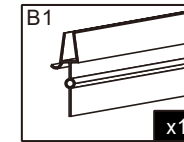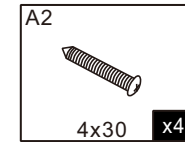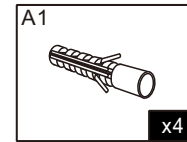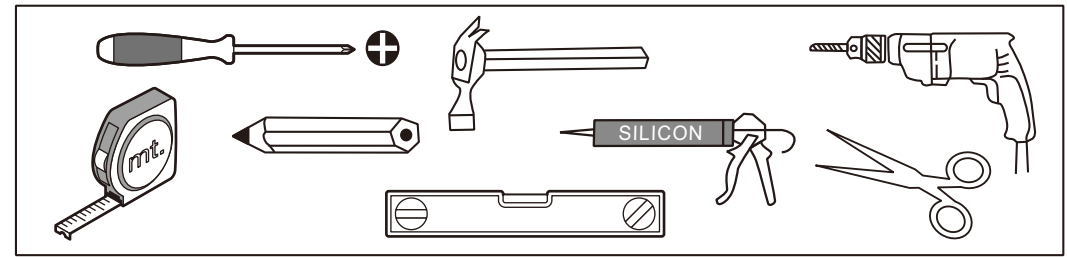

A1:Wall plug for wall

A2:Screw to fix channel to wall

B1:Plastic floor seal on the glass bottom

B2:Plastic seal between two glass panel

C1:Hinges for the glass






C2:Allen key for the hinge


D1:Screw for plastic cap(D3)

D2:Plastic screw cap cover

D3:Plastic screw cap


E1:Stabilized bar

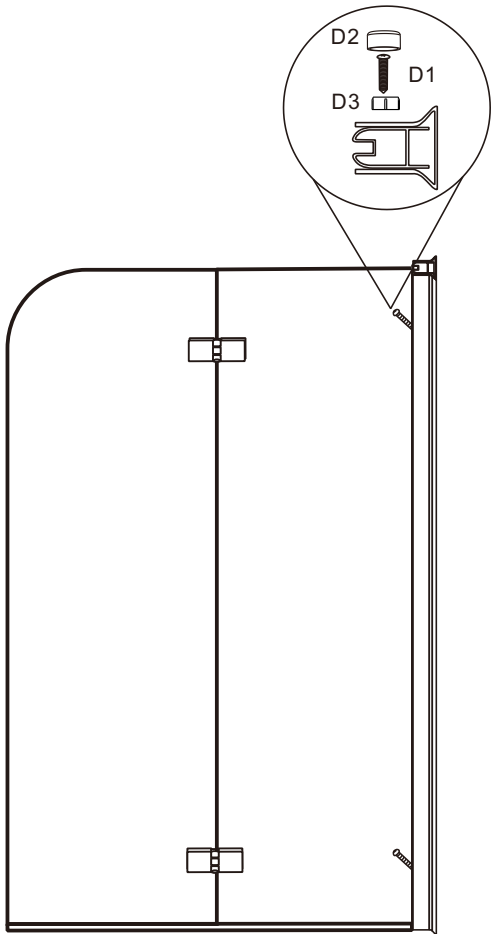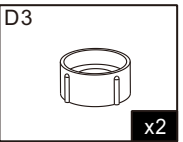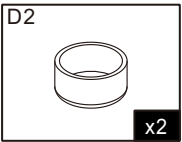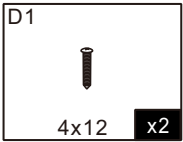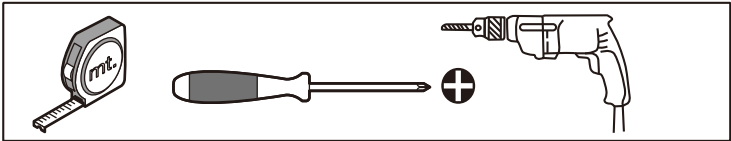

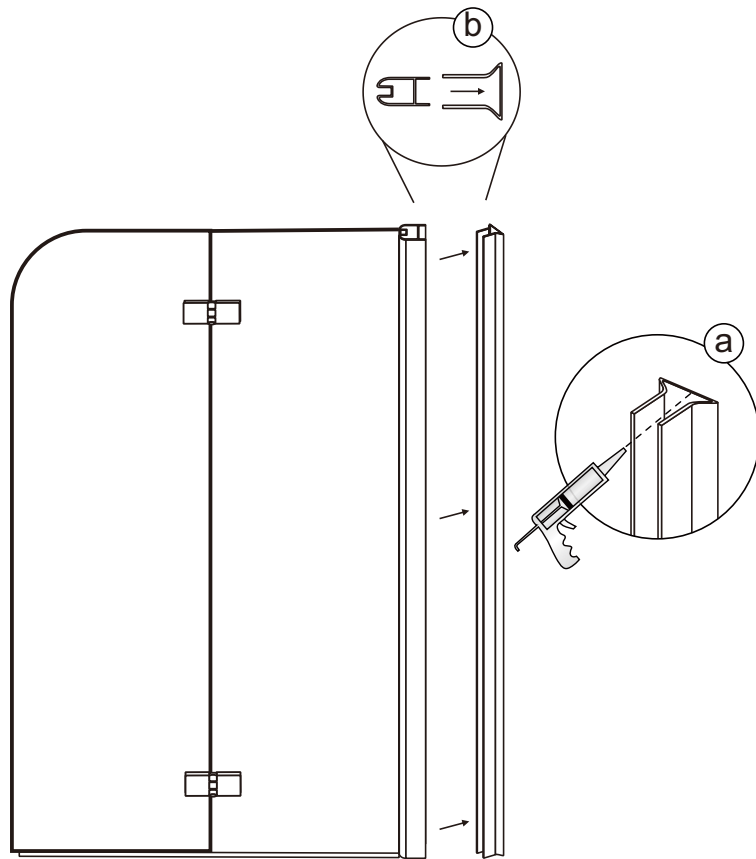






a. Pump Silicon inside the Chanel

b. Put the screen into the Chanel and clean the silicon

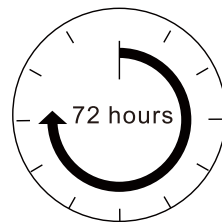

Allow 48 hours for silicone to dry before use.

Allow 72 hours for silicone to dry before use in winter.

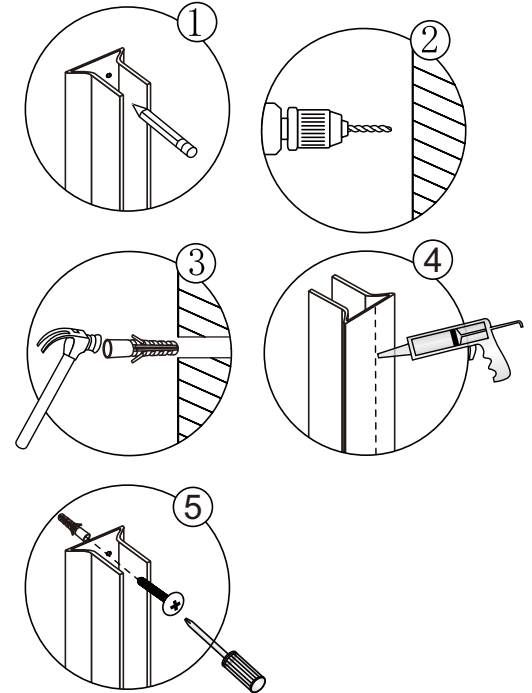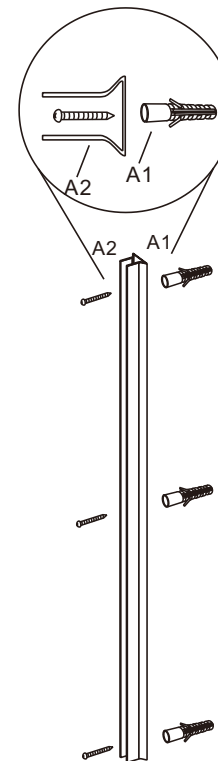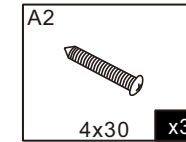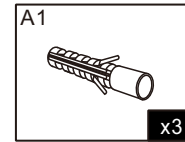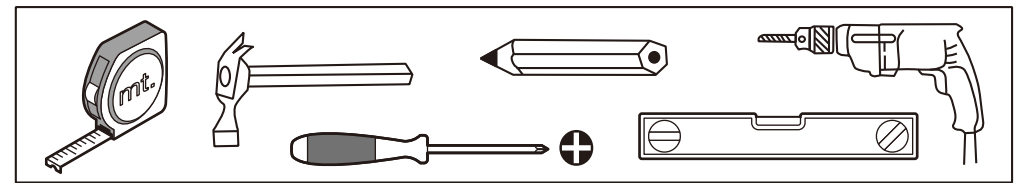

1.Place chanel in correct location and mark hole position.

2.Check for wires,cables,piper before you drill,if safe go ahead and drill holes

3.Use a rubber Mallet to knock inthe plastic plugs know in auseralia as (Spagetis).

4.Pump Silicon behind the Chanelto creat a water tight seal.

5.Long as they are Stainless or Galvenized so they dont rust over time

