

Installation Instruction

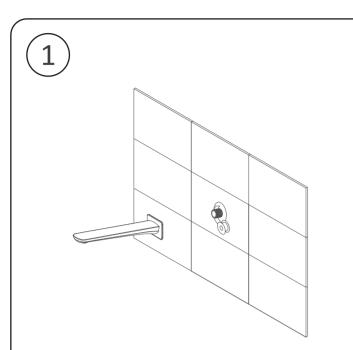



1. Wrap the Telflon tape around the G1/2 outlet thread.

note: Flush the pipe until the water is clean.

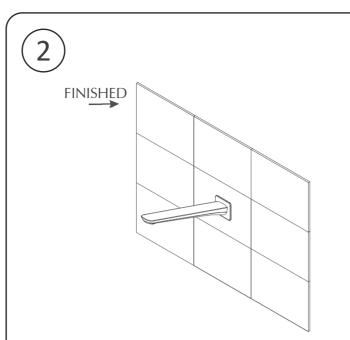

2. Turn the Spout body onto the outlet thread, and ensure the spout in the right direction.

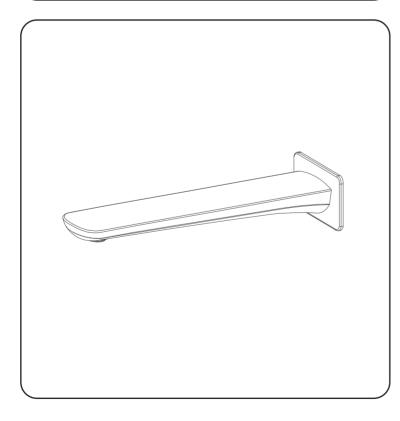

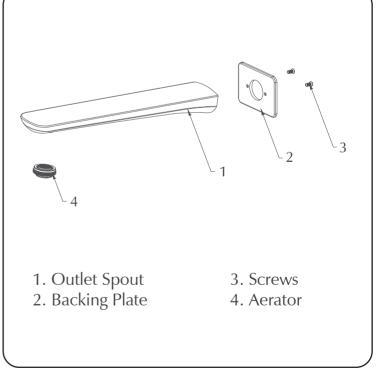



Please Note:

The Plumbing Code of Australia and the Australian Standards (AS/NZS 3500) require that water pressure on your property must not exceed 500kPa. Water mains pressure may be be higher depending on where you live. This tap must be installed by a licenced plumber.