MODEL: BTH-900/1000-1450 (Bracket Option)

INSTALLATION GUIDE

SIZE: 900X1450MM
1000X1450MM

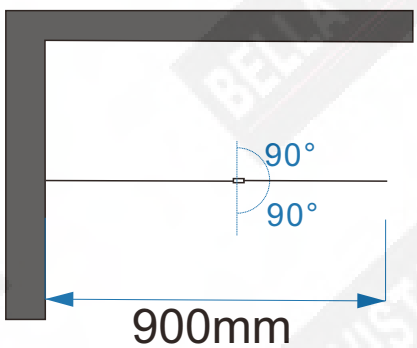

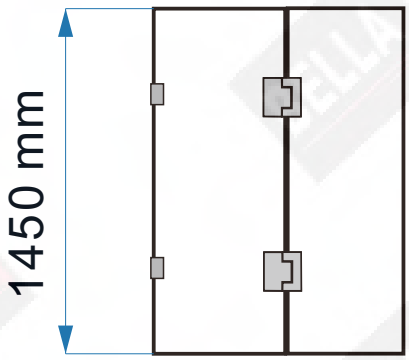

BELLA VISTA®

◆ General Information

Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufactruing fault. Damage reported after installation will not be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Notes: Safety glass can not be re-worked.

Please read these instructions carefully before start of installation.

Special care should be taken when drilling walls to avoid hidden pipes or electrical cables.

Note: This product is heavy and may require two people to install.

Aftercare instructions

After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.

Please keep these instructions for aftercare and customer service details.

Tools Required

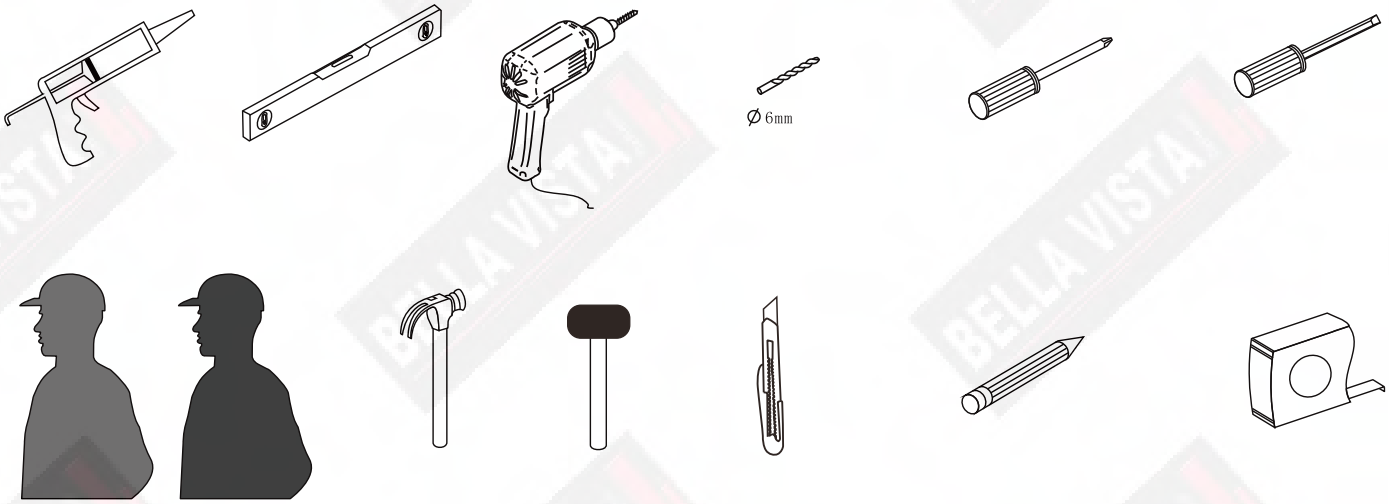

This product is heavy and may require two people to install.

Box contents

A1 Wall Plugs	x2	
A2 Screws M5X40	x2	
A3 Wall Brackets	x2	
B1 Bottom Door Seal	x1	Optional
C1 Middle Seal	x1	Optional
D1 Hinges	x2	
D2 Allen Key	x1	
E1 Fixed Pannel	x1	
E2 Door Pannel	x1	
Installation Instructions	x1	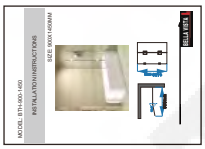

BELLA VISTA®

Assembly Information

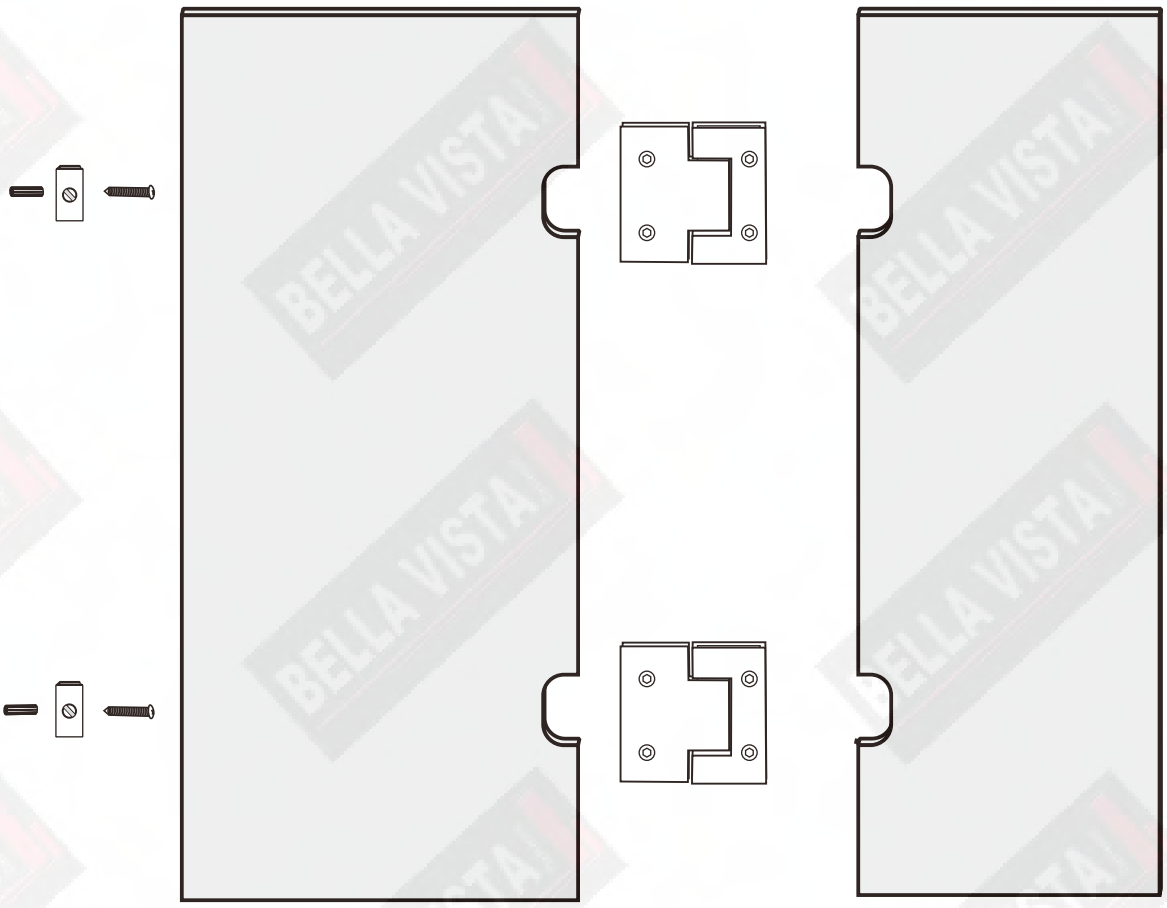

View from inside

Step1

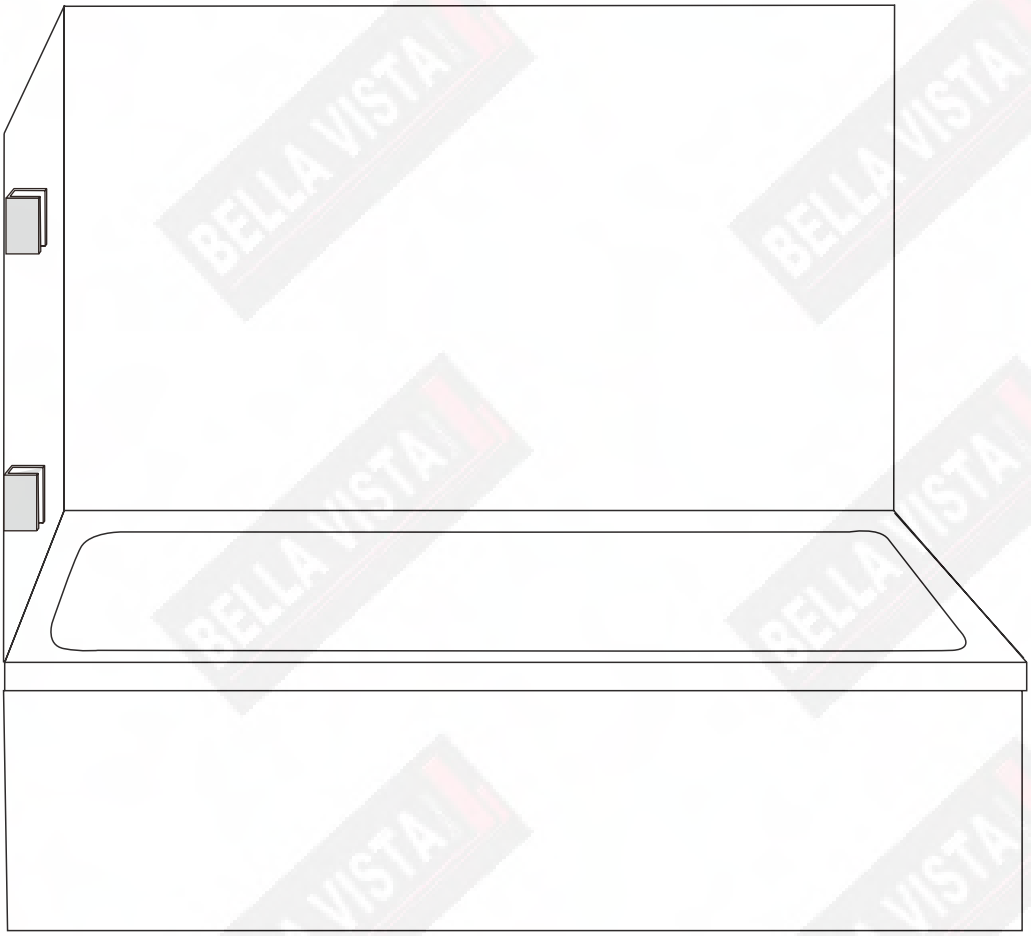

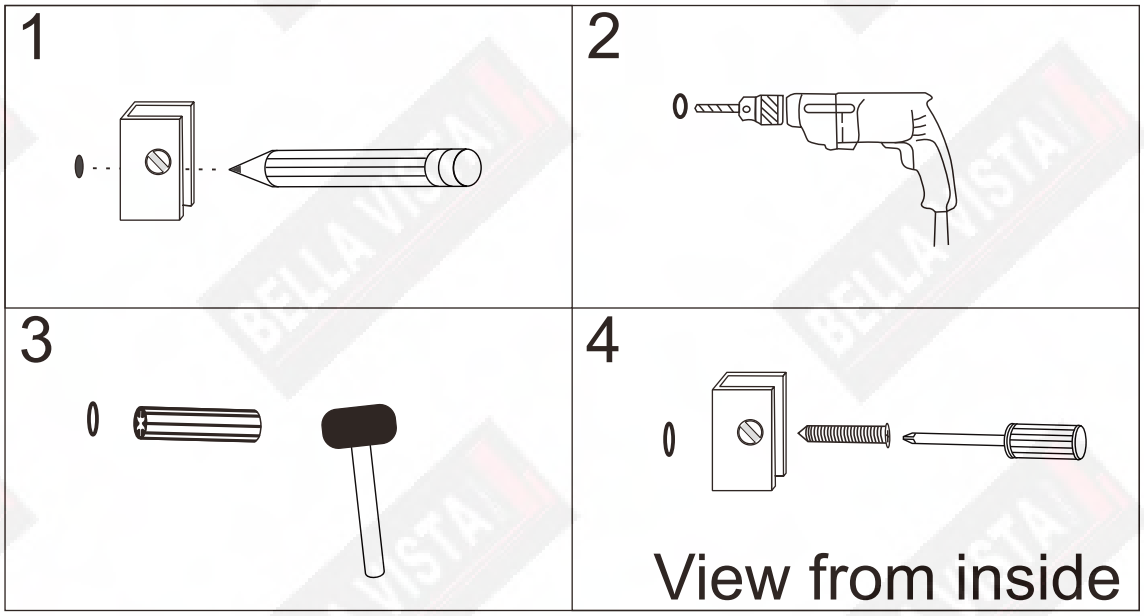

Step2

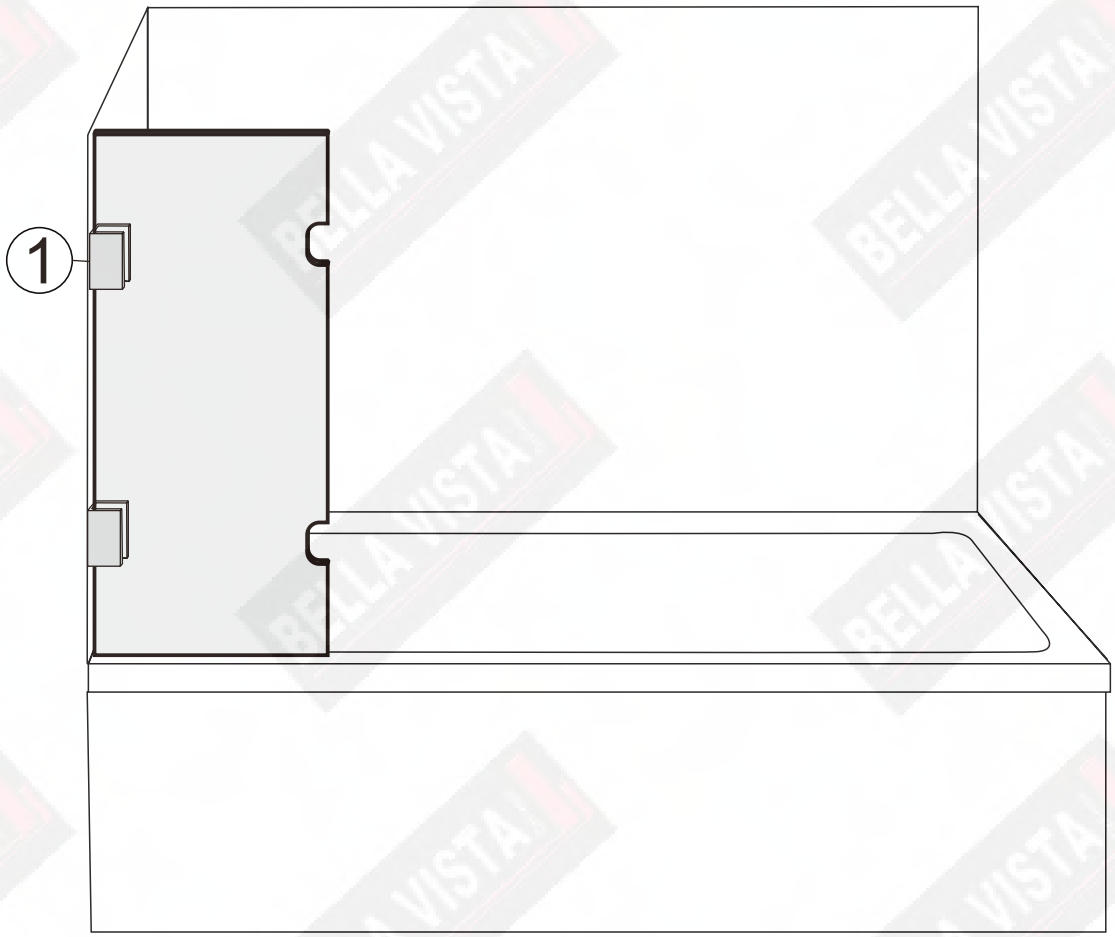

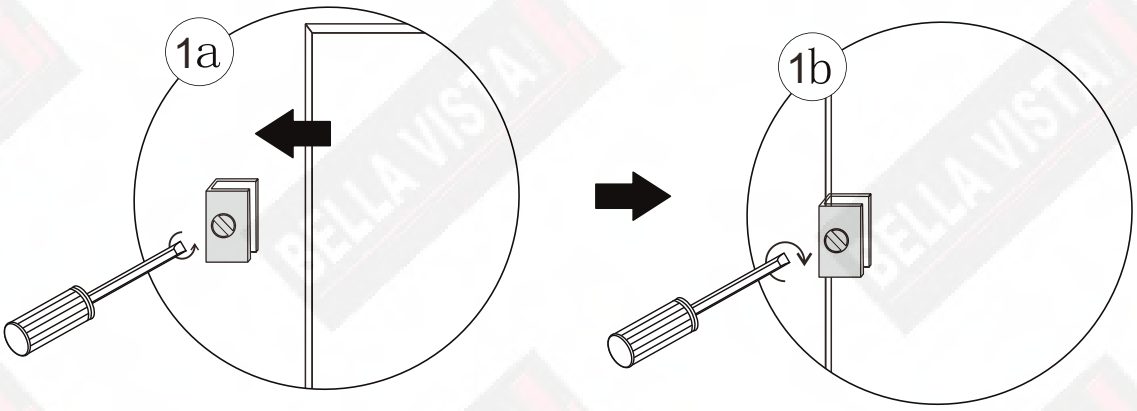

Step3

View from outside

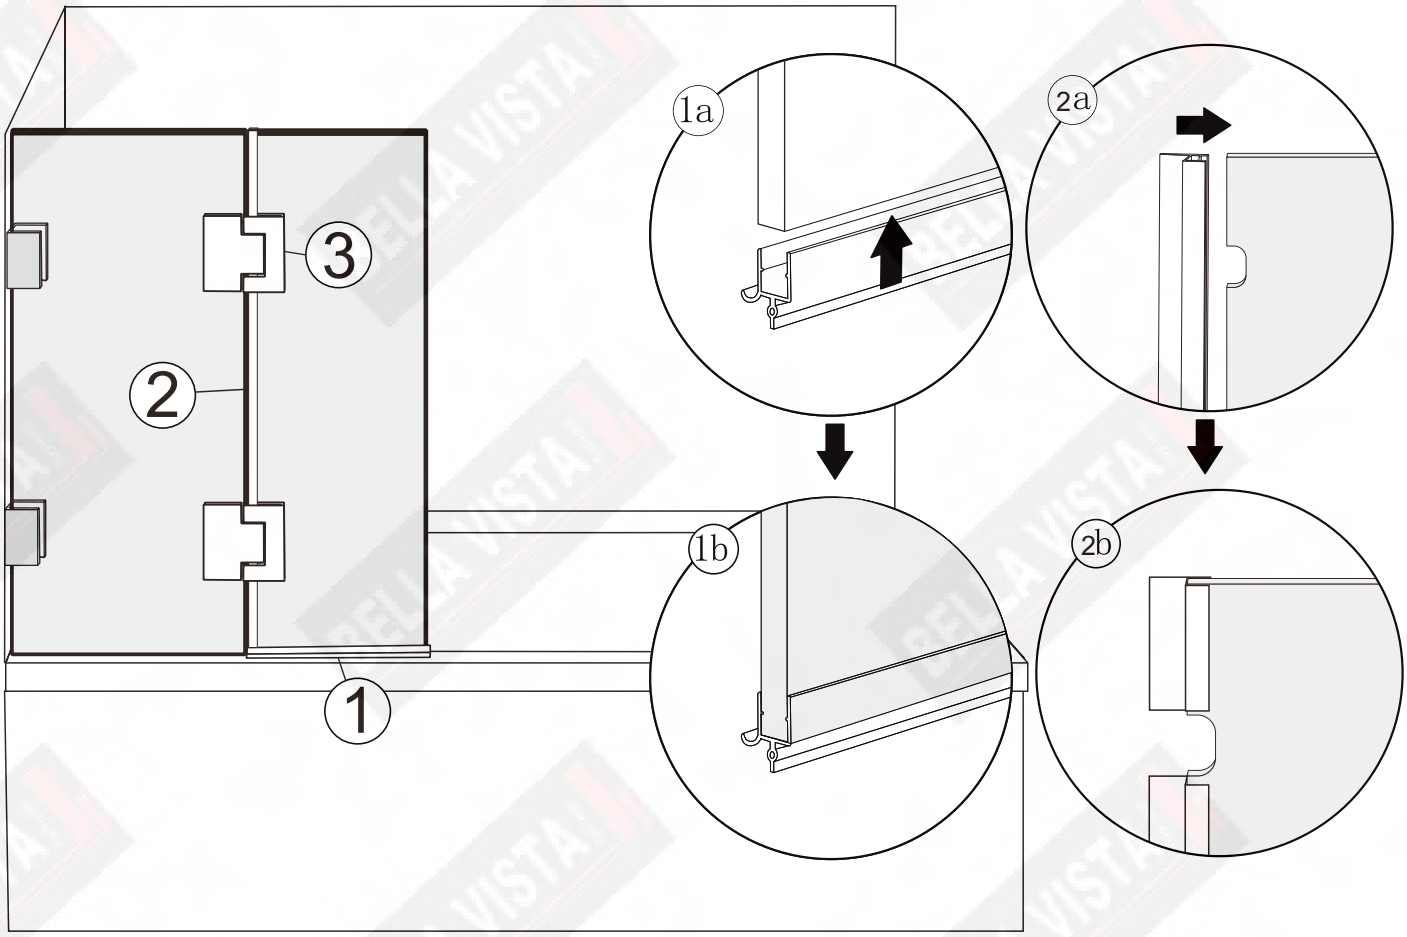

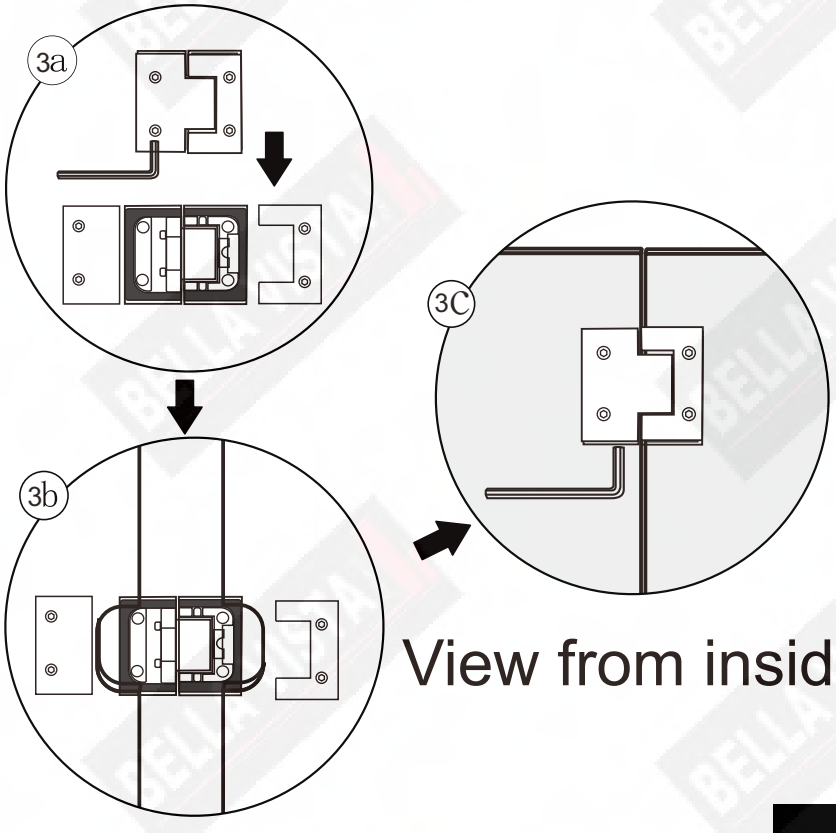

View from inside

Step4

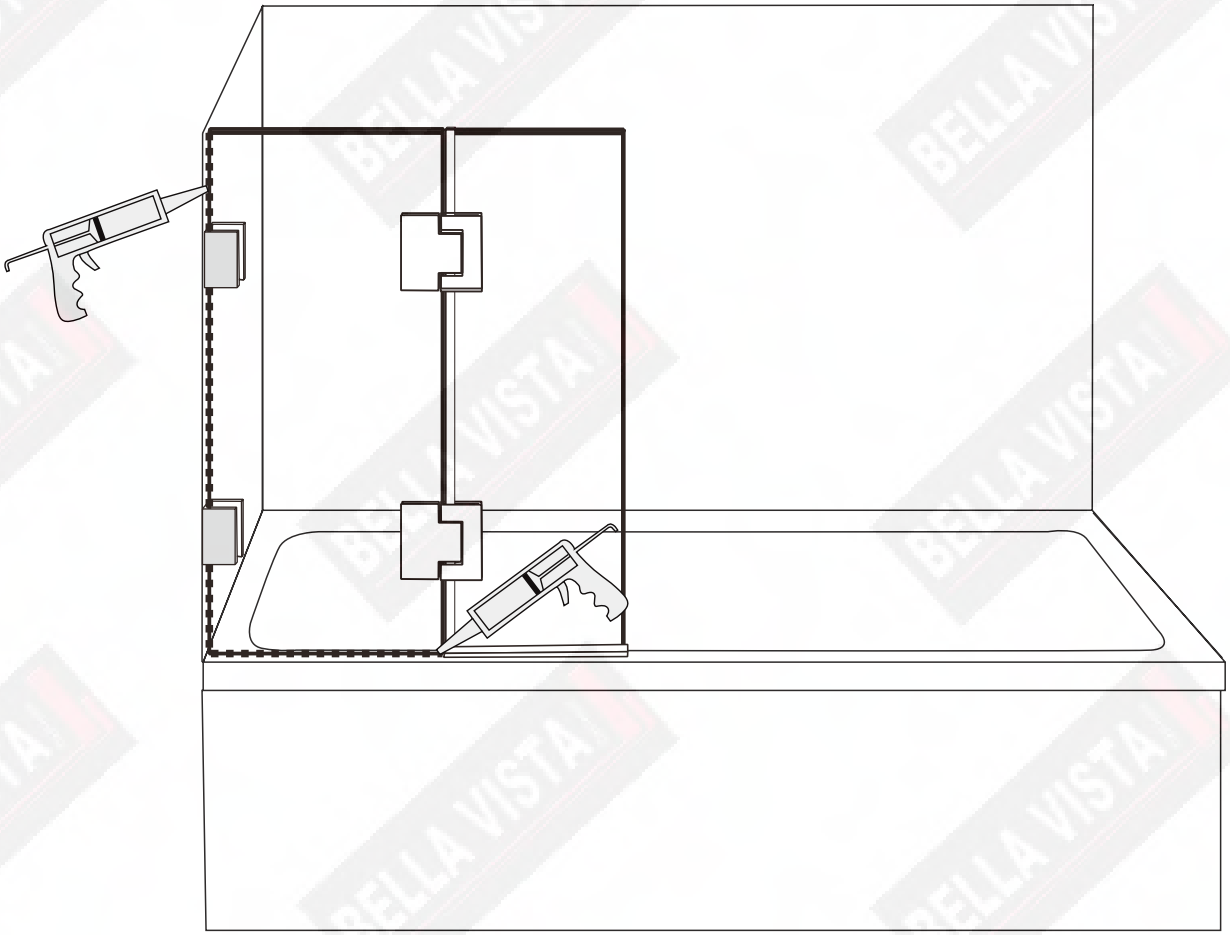

Structural Grade Silicone

Allow 48-72 hours for silicone to ***dry*** before use, depending on temperature(20-25°).

SHELF(Optional) 1

A1	Wall Plugs	x1	
A2	Screws M5X40	x1	
A3	Wall Brackets	x1	
A4	Shelf Glass	x1	*PLEASE NOTE: Shelf is an optional purchase*

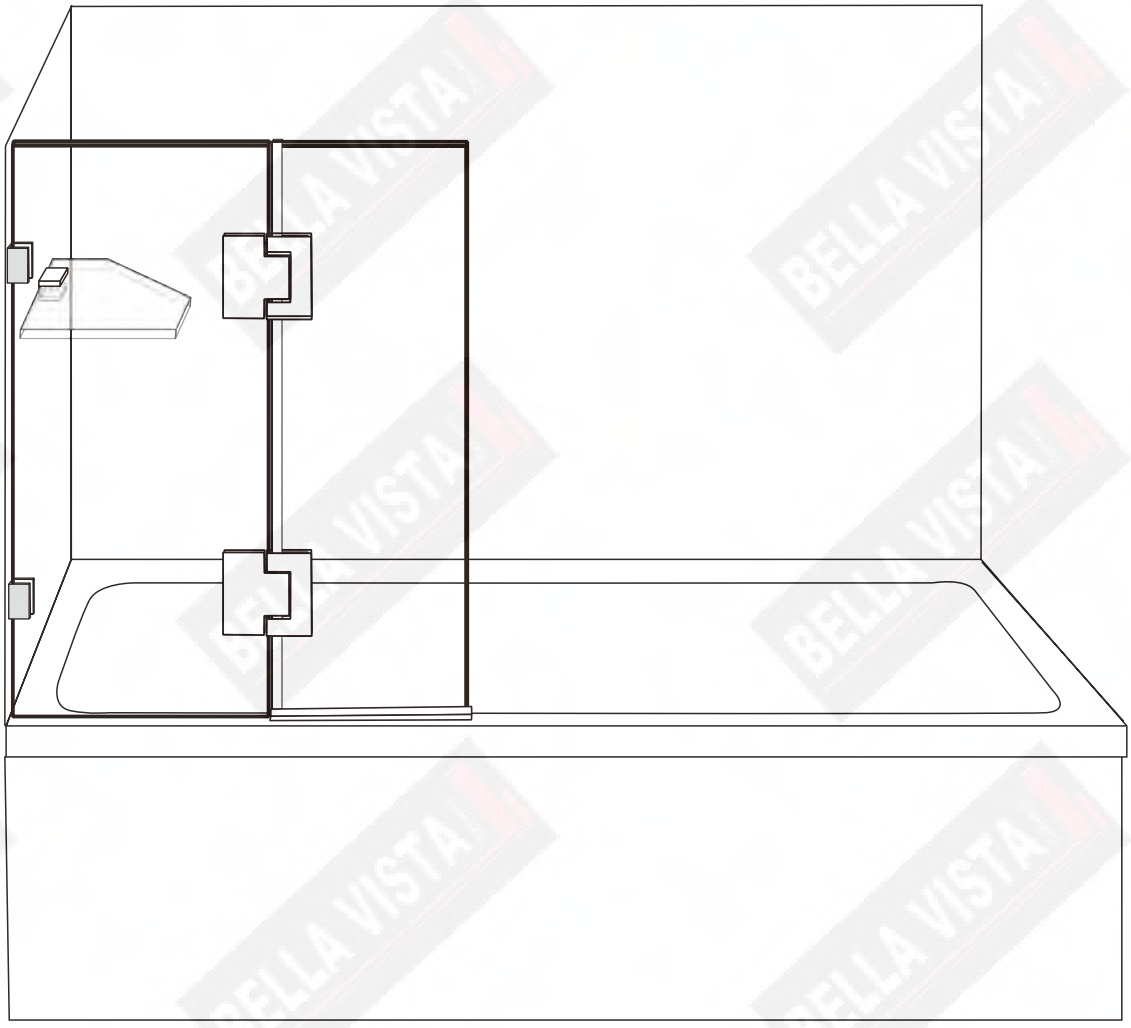

SHELF(Optional) 2

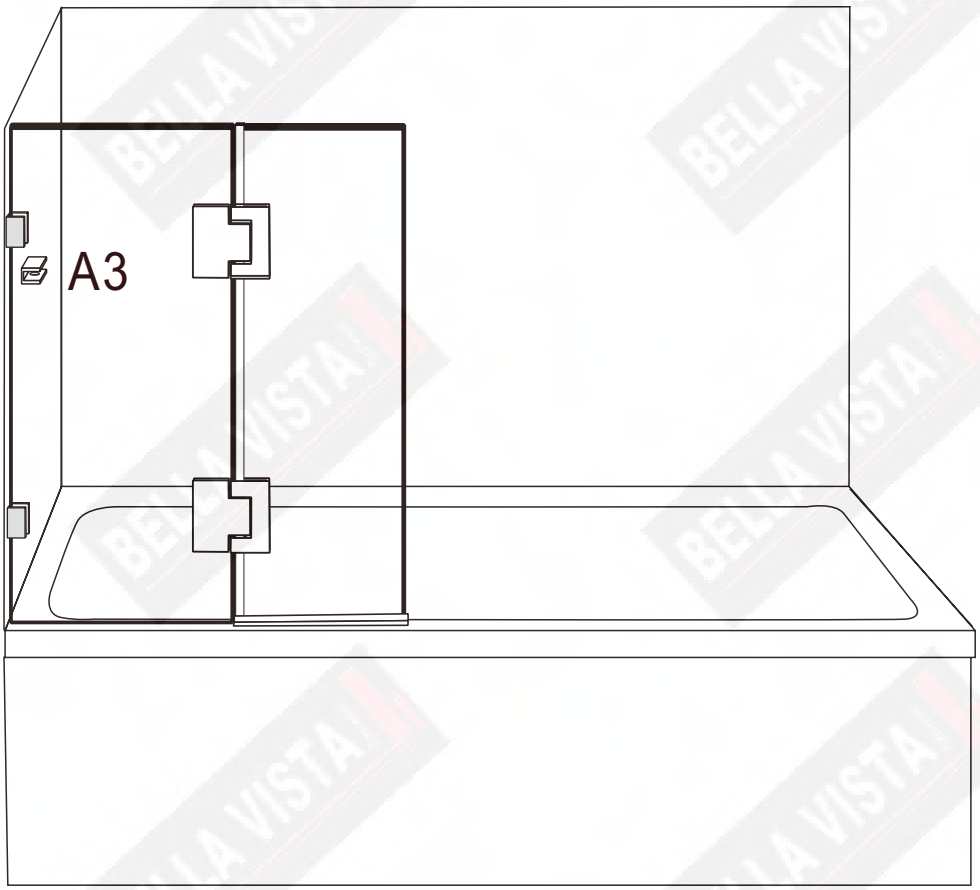

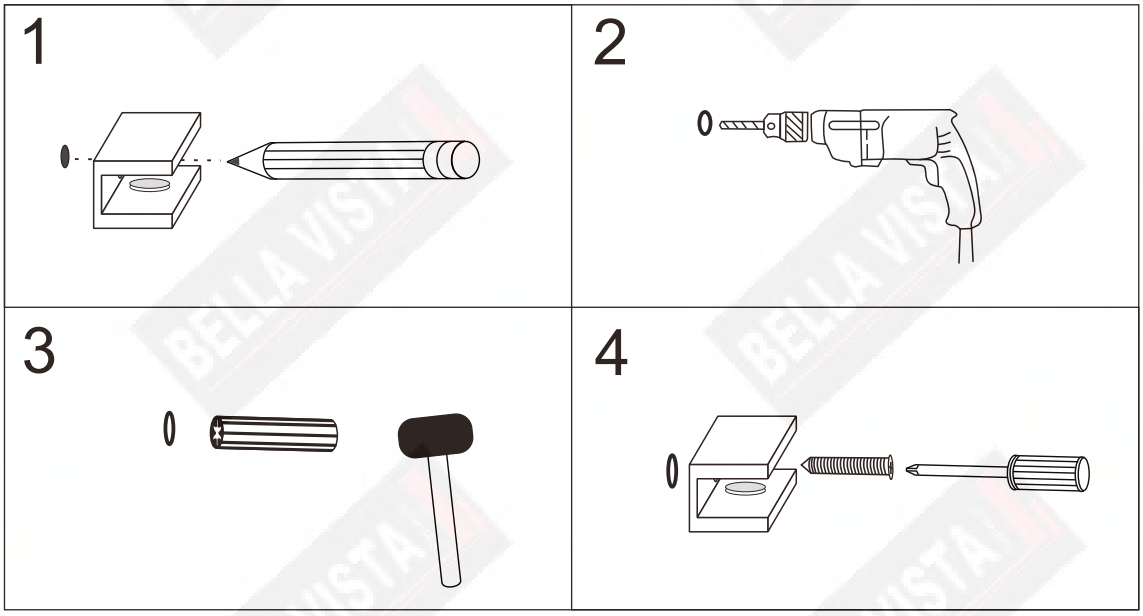

SHELF(Optional) 3

PLEASE NOTE: Shelf is an optional purchase

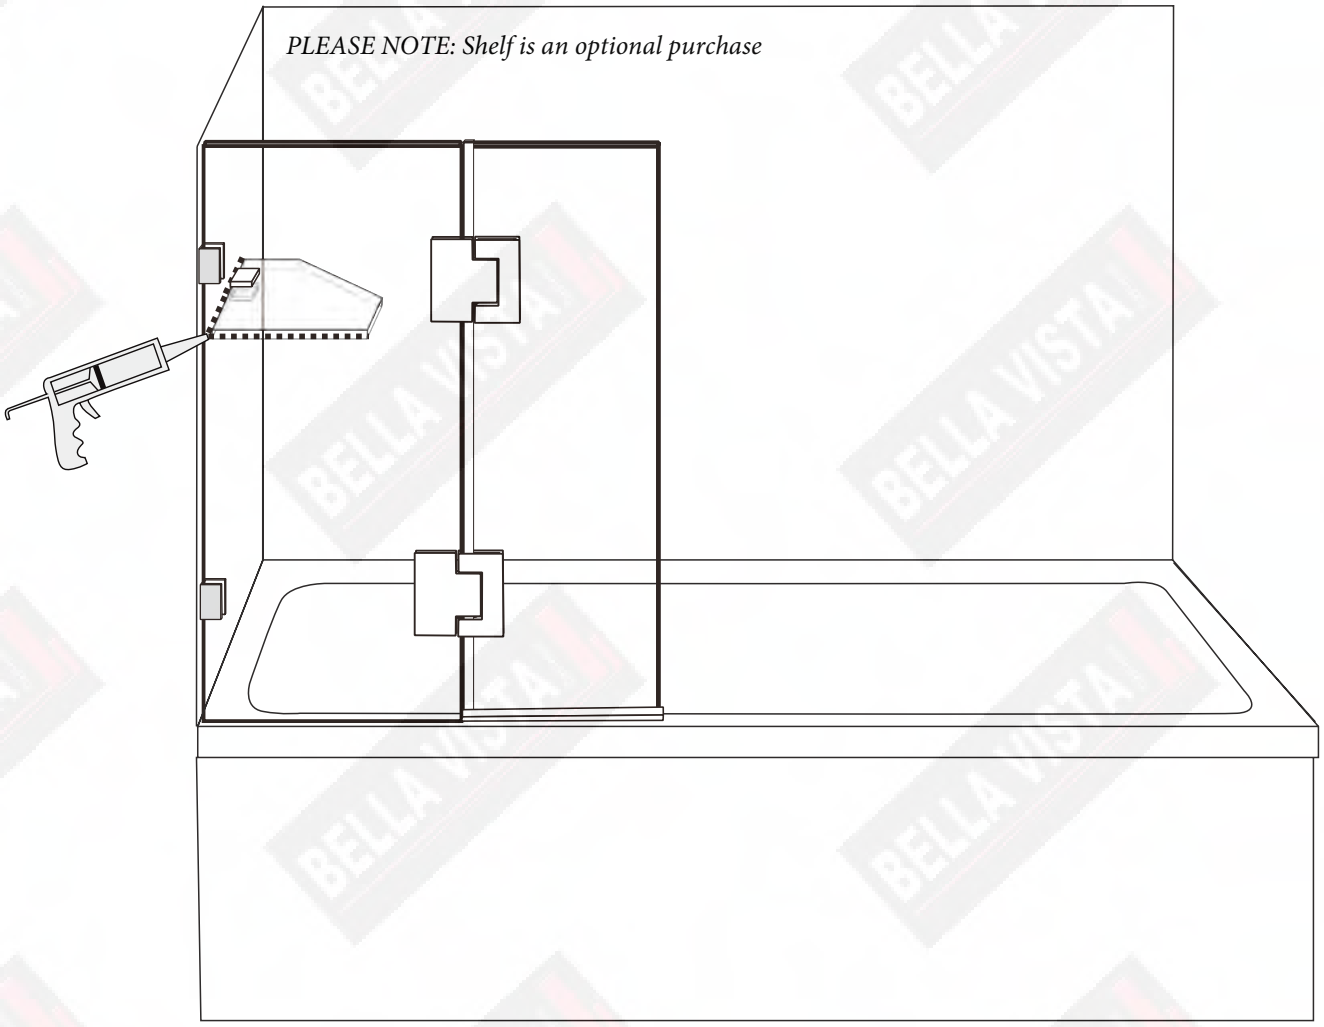

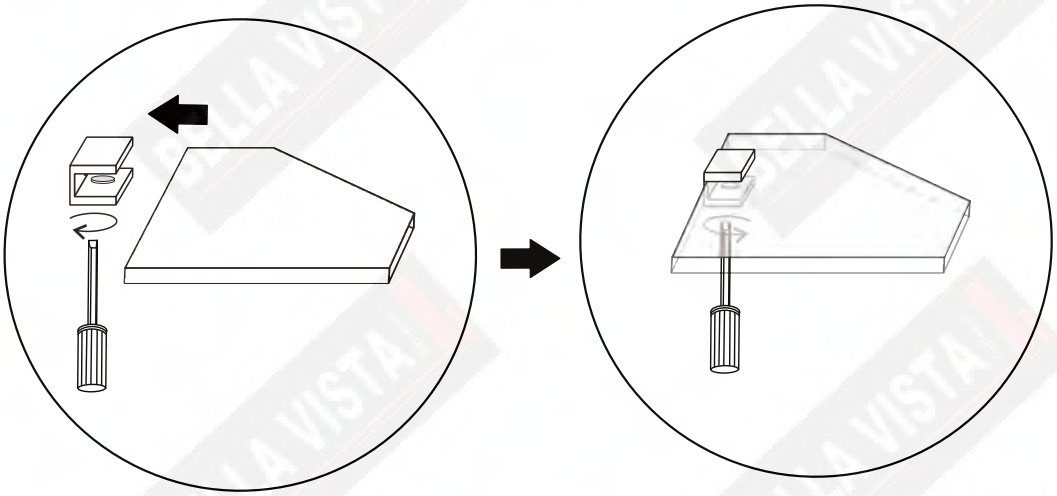

210x285mm

<u>* PLEASE NOTE: Plastic Packs are sold separately ***</u>**

Hinge and Glass Packers

sizes available in 1.5mm , 3mm , 4mm , 4.5mm . (packers can be trimmed to suit the size needed)

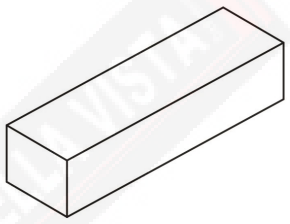

Medium density Plastic Packers

THESE PACKERS ARE USED TO FILL IN THE GAP BETWEEN THE GLASS AND HINGE BODY, AS PER PHOTO

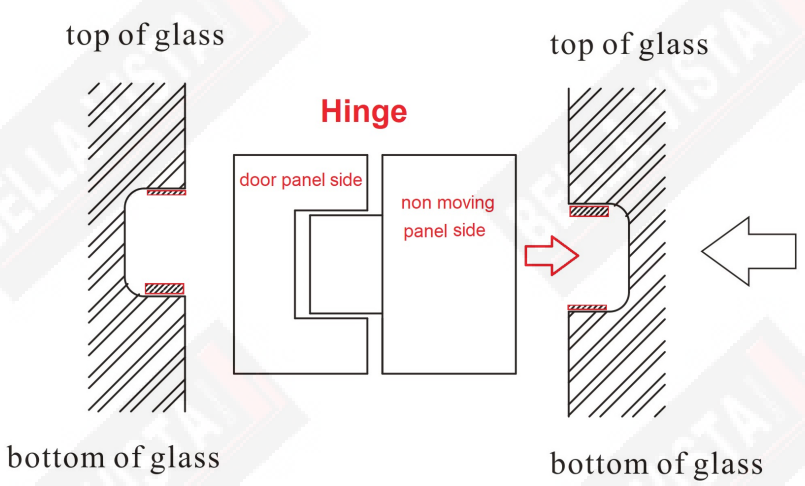

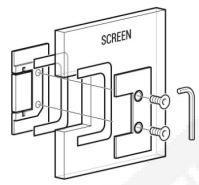

- Place Plastic Packer as per photo , packer can be trimmed to suit gap .
- it might be needed to place smaller packer or trimmed to size packer under the hinge to fill the empty gap .
- smaller packer might need to be on top or on the buttom .
- the idea is to have the door resting on the packer and not relying on just the hinge to support the load .

PUT THE SUITABLE SIZE PACKER BETWEEN HINGE AND GLASS AS PER PHOTO TOP OR BOTTOM TO STOP THE GLASS FROM DROPPING. PACKERS CAN BE TRIMMED TO SIZE IF NEEDED TO FIT BETWEEN GLASS AND HINGE BODY

IF THE PACKERS ARE NOT FITTED AND DOOR DROPS WARRANTY IS VOID

<u>* PLEASE NOTE: Plastic Packs are sold separately ***</u>**