BELLAVISTA

Installation Instructions:
MODEL: OLIVIA Semi-Framed Pivot Shower Screen

- Assembly Drawing:

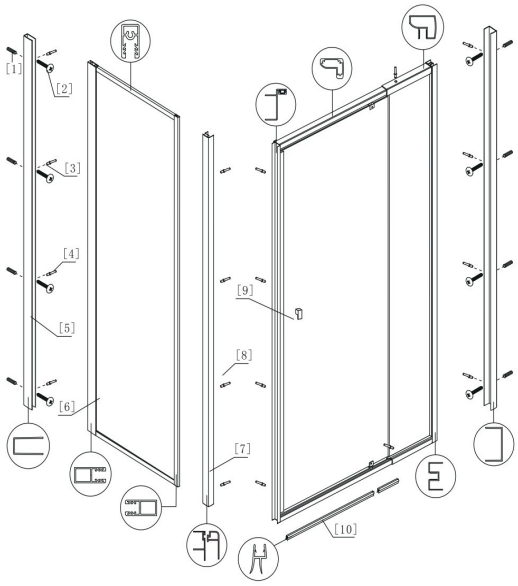

- Step 1:

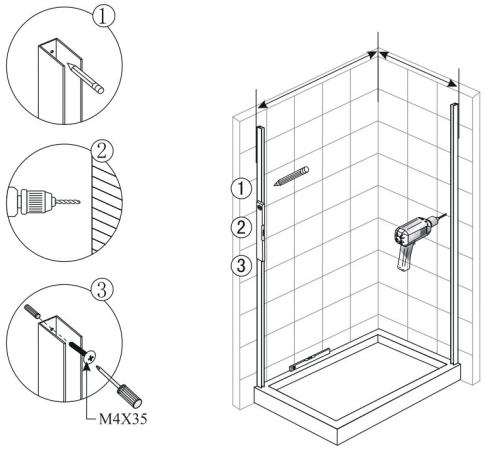

- Step 2:

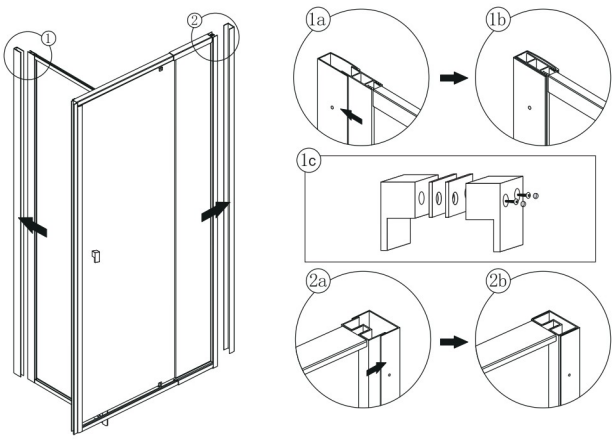

- Step 3:

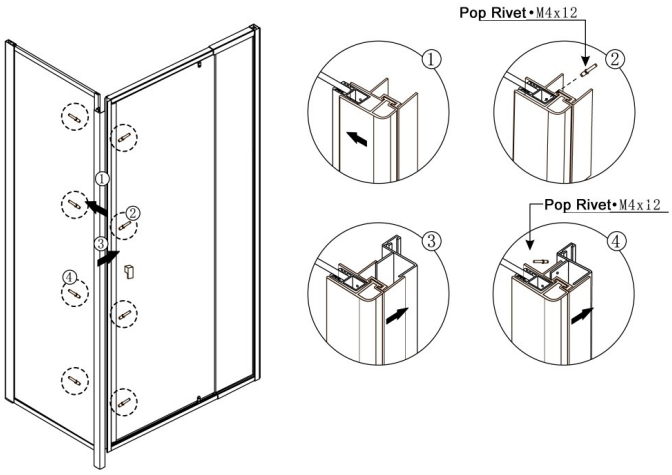

- Step 4:

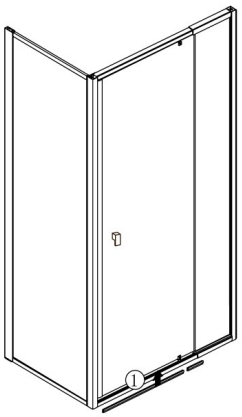

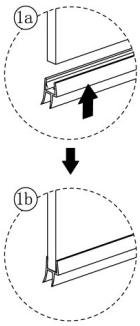

⚠ Ensure wall profiles/channels are plumb.
Adjust telescopic frame to be square & level
to ensure the door opens & closes smoothly.

- Step 5:

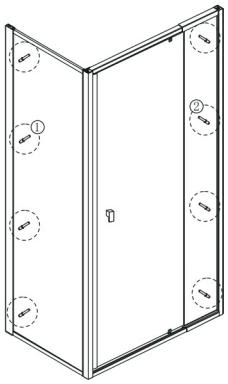

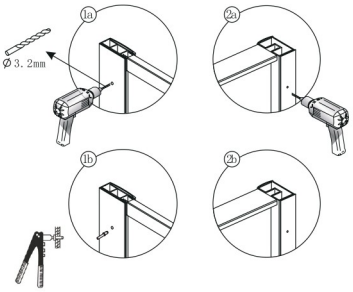

- Step 6:

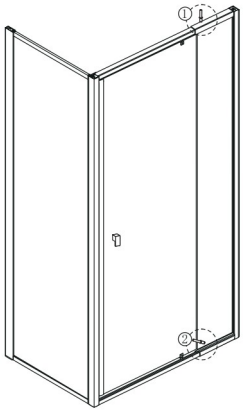

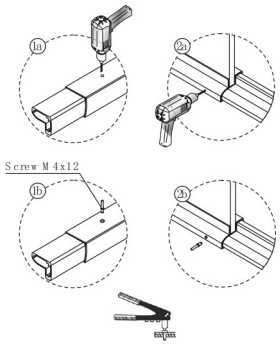

- Step 7:

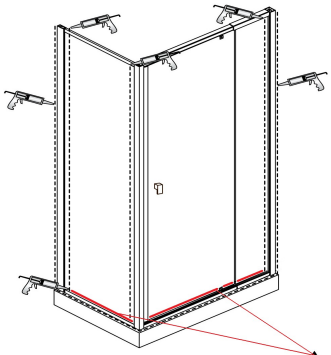

Allow 24 hours for silicone to **dry** before use.

DO NOT silicon bottom ***inside edges*** of shower frame to allow moisture & condensation to drain back into shower area.

*This product must be installed in accordance with AS 1288

Thank you for choosing

BELLAVISTA